=BriefCam

TRANSFORMING VIDEO SURVEILLANCE INTO ACTIONABLE INTELLIGENCE



BriefCam[®] Starter Kit

Quick Start Guide | Milestone XProtect[®]



November 2019

TRANSFORMING VIDEO SURVEILLANCE INTO ACTIONABLE INTELLIGENCE

Introduction

Welcome to the BriefCam Starter Kit for Milestone XProtect. This Quick Start Installation Guide outlines the five-steps in five-minutes deployment for rapid time-to-value.

Get started and accelerate investigations with BriefCam RapidReview

- Review hours of video in minutes with VIDEO SYNOPSIS®
- Pinpoint objects of interest with robust multi-camera search capabilities supporting 27 classes and attributes, face recognition, appearance similarity, color, size, speed, path, direction, and dwell time
- Quickly and effectively organizes all video assets of an investigation with collaborative Case Management
- Rapidly visualize activity level, dwell time, common paths and background changes with powerful Visual Layers

Your system components include:

- 1. A pre-configured and certified BriefCam hardware appliance with BriefCam RapidReview
- 2. BriefCam's Open API (BOA) component
- 3. BriefCam's Milestone VMS integration plugin
- 4. Milestone VMS server
- 5. N x Milestone XProtect Smart Client desktops



TRANSFORMING VIDEO SURVEILLANCE INTO ACTIONABLE INTELLIGENCE

Five – Steps in Five – Minutes

- 1. Activate the BriefCam license
- 2. Complete the VMS IP Address Configuration
- 3. Activate the cameras
- 4. Update the SSO address
- 5. Install BriefCam's Embedded Client for Milestone plug-in

Note: Creating user names is not neccesary since they are automatically created by the SSO.

STEP 1 – Activate the BriefCam License

1. On the BriefCam appliance, launch the BriefCam License Activation application from the **Start** menu.



2. Enter the product key that you received from BriefCam and click Activate.

BriefCam License Activation					
Online Offline					
Product key:					
Settings					
Activate Close					

TRANSFORMING VIDEO SURVEILLANCE INTO ACTIONABLE INTELLIGENCE

3. Upon successful activation, the following dialog will appear.

BriefCam License Activation	×
Activation completed successfully	
ОК	

 Click **OK** to close the dialog, then click **Close** in the main application window to close the License Activation application.

STEP 2 – Complete the VMS IP Address Configuration

- 1. In a browser, enter the URL of the BriefCam appliance followed by slash (/) and the word **admin**, for example: **bcappliance/admin**. The BriefCam Administrator Console will open.
- 2. Log into the console. The user is **Administrator** and the password is the password that was given to you by BriefCam's Support team when you received the appliance.
- 3. Open the Settings section and click Camera Management.

=BriefCam

TRANSFORMING VIDEO SURVEILLANCE INTO ACTIONABLE INTELLIGENCE

4. Click the Add directory. The Add Directory dialog opens.

Add Di	rectory	×
Fill in th	e fields below	
	Video Integration * Milestone Integration	
	Directory Name * Milestone	
	Address *	
	1/2.1.1.221	
	admin	
	Password	
Cancel		Add

- 5. From the Video Integration field, select Milestone Integration.
- 6. In the **Directory Name** field, enter a display name for the user directory.
- 7. In the **Address** field, enter the address of the Milestone VMS server.

STEP 3 – Activate the Cameras

- 1. In the **User name** and **Password** fields, enter an administrator user name and password of the VMS server. You want to use an admin user so that BriefCam can addess all cameras.
- 2. Click **Add** to add the directory.
- 3. In the new directory, click the **Status** check box to enable all of the cameras and then click **Apply.**



TRANSFORMING VIDEO SURVEILLANCE INTO ACTIONABLE INTELLIGENCE

CAMERA MANAGEMENT							ی 🧐	Sign Out
Licenses: 100 Remaining: 55 Activated: 45								
Search Directories Q		Search Ca	meras Q					121
+ Milestone (10)	:		Name	Activation Time	Z Status	Permissions	Path	
			172.1.1.113 Main Stre	2019/07/07 15:58	Enabled	12	N/A	<u>^</u>
			172.1.1.122 - Main En	2019/07/07 15:58	Enabled	12	N/A	
			172.1.1.131 - Cafeteri	2019/07/07 15:58	Enabled	12	N/A	

STEP 4 – Update the SSO Address

- 1. On the BriefCam appliance, go to C:\Program Files\BriefCam\BriefCam Server and open the MilestoneSSOProvider.exe.config file.
- 2. Edit the MilestoneAddress setting with the IP address of the Milestone VMS server.



STEP 5 – Install BriefCam's Embedded Client for Milestone Plugin

On each Milestone XProtect client machine, install BriefCam's Embedded Client for Milestone plugin.

- 1. In a browser, put in the name of the BriefCam appliance machine followed by a slash (/) and the word **install**, for example: **bcappliance/install**.
- 2. Click on the downloaded file.
- 3. The installation checks for prerequisites, such as Microsoft .NET Framework 4.7.2 Full and Microsoft Visual C++ 2015 2017 2019 Redistributable Package (x64).

Page 6 of 9

TRANSFORMING VIDEO SURVEILLANCE INTO ACTIONABLE INTELLIGENCE

- 4. If anything is missing, you will be prompted to install the missing prerequisites and click **Install**.
- 5. In the Welcome screen, click **Next**.
- 6. Read the license, accept the License Agreement terms and click Next.
- 7. Select the installation destination path and click **Next**.

Note that the installation path must be the same directory where **Milestone XProtect Smart Client** is installed. (This may vary slightly between client machines and between Milestone versions.)



- Enter the BriefCam Web Application URL (which is the address of the BriefCam appliance followed by /synopsis) and verify that the provided URL is correct by clicking the Verify URL button.
- In the BriefCam Open API (BOA) Server Address field, enter the address of the BriefCam appliance followed by /BOA.
- 10. Click Next.

器 BriefCam Embedded Client for Milestone XProtect - InstallShield Wizard							
=BriefCam							
BriefCam's Web Server Address*:	BCAppliance/Synopsis/						
* Use your BriefCam website URL (E.g Host	name/Synopsis/)						
	Verify URL						
BriefCam Open API (BOA) Server Address:	http://BCAppliance/BOA						
	1						
InstallShield							
	< Back Next > Cancel						

11. Click **Install** and then click **Finish**.

=BriefCam

TRANSFORMING VIDEO SURVEILLANCE INTO ACTIONABLE INTELLIGENCE

In the BriefCam Administrator Console, restart the services by selecting all of the services, clicking the stop button (■) and then the start button (▶).

=BriefCa	m admin	SERVIC	ES						<u>@</u>	← Sign Out
Events										
요. User Ma	nagement 🗸	Entitles	✓ Hosts	~	Status	~			Search	Q
Users & O	Groups		Entity ~	PID	Host		Status	Last Update		-
Director	ies									-
Deploym	ient 🗸		Alert Processing Server	N/A	16GPU		Stopped	2019/09/20 15:02		1
Hosts			BI Rule Engine Service	13980	16GPU		Running	2019/09/20 15:02		
GPUs										
Services			Face Recognition Service	13252	16GPU		Running	2019/09/20 15:02		
Settings	•		Fetching Service	14524	16GPU		Running	2019/09/20 15:02		
Activities										
			Milestone SSO Provider	2108	16GPU		Running	2019/09/20 15:02		
			Notification Service	9360	16GPU		Running	2019/09/20 15:02		- 1
			Processing Server	17852	16GPU		Running	2019/09/20 15:02		
			Rendering Service	1000	16GPU		Running	2019/09/20 15:02		

When you are finished with the five steps, you'll see BriefCam embedded directly into Milestone.



TRANSFORMING VIDEO SURVEILLANCE INTO ACTIONABLE INTELLIGENCE

Contact Information

AMERICAS

Riverside Center 275 Grove Street Suite 2-400 Newton, MA 02466 USA +1-860-269-4400

APAC

1 Harbourfront Place Harbourfront Tower One 04-01 Singapore 098633 +65 6722 3770

EMEA

2 HaMa'yan Street Modi'in Technology Park Modi'in 7177871 Israel +972-2-533-7228

Visit us on social media



4.16

Page 9 of 9

BriefCam | 11/18/19