


Introduction to Milestone Integration with MIMS Software via MIMS Driver

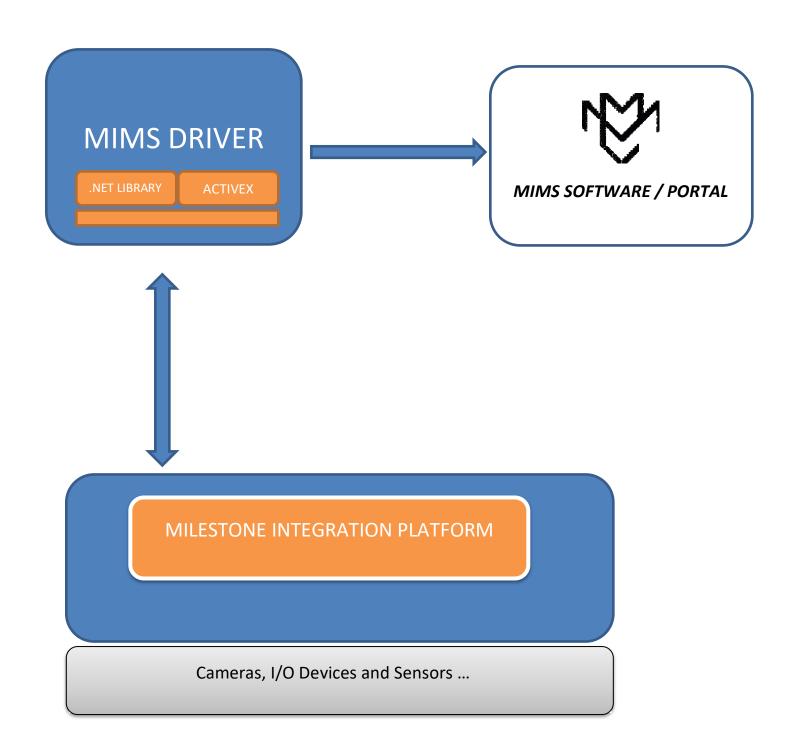

Integrate to MIMS SOFTWARE USING MIMS DRIVER:

- Installation of MIMS Software (MIMS Portal / Mobile Operator Client / MIMS CLIENT) via the installation MSI file provide by ArrowLabs.
- 2. Load ArrowLabs Milestone driver (.dll) in the server portal , using the third party system settings .
- 3. Add Milestone Server details like IP , Port , Username and Password while loading the driver in MIMS server portal .
- 4. Run MIMS MOC (Mobile Operator Client) , Go to Server > Setting and select the Milestone server added from MIMS portal .
- 5. Check if connection to server is successful, Go to main tab, it should load list of Cameras available in the Milestone server. Also user will be able to get Alarms and events in the Event tab generated by hardware devices like sensor alarms.