



### Open Bottom Cover



1. Loosen 6 screws from Bottom cover as the arrow locations.

### Disassemble HDD Tray



2. Loosen 4 screws as the arrow directions.

### Release HDD Tray




3. Move HDD tray as arrow direction.

### Release HDD Tray



4. Lift HDD tray about 45° and draw it out.

### HDD & WiFi Installation

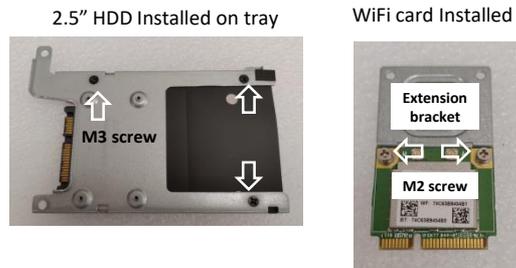


5. HDD tray & WiFi card installation. (Screws & mPCIe extension bracket are in accessories kit . )

### Mini PCIe Installation




6. Install SSD or WiFi card Mini PCIe slot & plug in antenna IPEX header on WiFi card (White cable for Main & black cable for Aux location).

### DRAM Maintenance

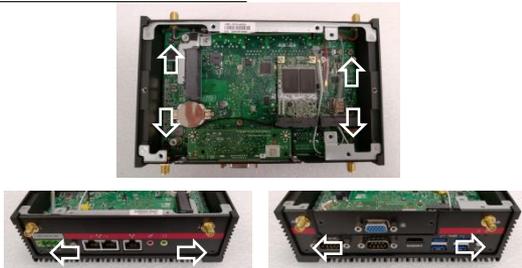

7. Loosen 4 screws from MB (2 screws from front & rear cover).


### DRAM Maintenance

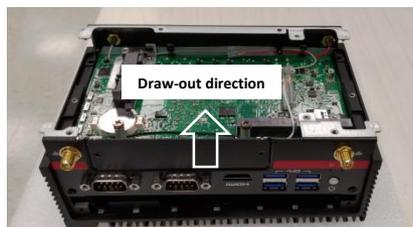

8. Draw the MB sub-assembly out from top cover as arrow direction.

### DRAM Maintenance

Peel off the protective film

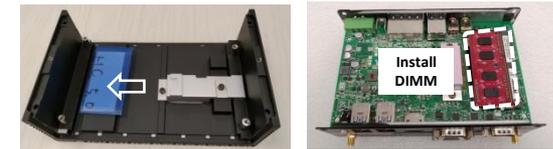

9. Remove the film from top cover & install DIMM to MB.