



BOSCH

AVIOTEC IP starlight 8000

FCS-8000-VFD-B / Firmware 7.7x

en Operation and Commissioning Manual

Table of contents

1	Safety instructions	5
1.1	General Safety Messages / Notices	5
2	Introduction	8
2.1	Disclaimer	8
2.2	About this manual	8
2.3	Conventions in this manual	8
2.4	Definition of optical terms	8
2.4.1	Illumination	8
2.4.2	Focal length	9
2.4.3	Monitoring Area	10
2.4.4	Different angle types	10
3	System Overview	13
3.1	Algorithm	13
3.1.1	Flame detection characteristics	13
3.1.2	Smoke detection characteristics	13
4	Installation	18
4.1	Requirements	18
4.2	Preparation in the office	19
4.3	On-site commissioning	19
4.4	Lens mounting	19
4.5	Camera mounting	20
4.6	Setting the field of view	21
4.7	Wiring of the camera	22
4.8	Alarm output	23
4.9	Alarm input	24
5	Camera integration	27
5.1	Local Area Network	28
5.2	Local Area Network with recording solution	28
5.3	Monitoring Center	29
5.4	Fire Alarm Control Panel	29
5.5	Mobile Devices	31
6	Access to the device	32
6.1	Access via web interface	32
6.2	Configuration Manager	32
7	Adjustment of detection settings	33
7.1	General settings	33
7.2	Adjustments of image regions	34
7.3	Adaptation to the lighting situation	37
7.3.1	General lightning settings	37
7.3.2	Flickering	37
7.4	Relay settings	37
8	Use cases	39
8.1	Fire detection only	39
8.2	Fire detection and VCA profiles	39
8.3	Scheduled fire detection	39
8.4	External trigger to switch fire detection mode	40
9	Troubleshooting	42
9.1	False Alarms	42

9.1.1	Quick solution to solve false alarms	42
9.1.2	False alarms under 4 seconds concerning the whole detection area	42
9.1.3	False alarms at small constant areas	42
9.1.4	Vibrations at the camera site	43
9.2	No alarm transmission	43
9.3	No fire detection	43
9.4	Image quality	43
9.5	Camera	43
10	Maintenance	45
10.1	Cleaning	45
10.2	Repair	45
10.3	Reset	45
10.4	Maintenance intervals	45
11	Technical data	47
12	Appendices	49
12.1	LVF-5005C-S4109 (standard lens)	49
12.1.1	Flame detection	49
12.1.2	Smoke detection	51
12.2	LVF-8008C-P0413	53
12.2.1	Flame detection	53
12.2.2	Smoke detection	55
12.3	LVF-5005N-S1250	56
12.3.1	Flame detection	56
12.3.2	Smoke detection	58
12.4	Commissioning report	60

1 Safety instructions

In this document, the following symbols and notations are used to draw attention to special situations:

**Danger!**

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

**Warning!**

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

**Caution!**

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

**Notice!**

Indicates a situation which, if not avoided, could result in damage to the equipment or environment, or data loss.

1.1 General Safety Messages / Notices

**Warning!**

Do not moisten the electronic appliances inside of the lens.
It may cause fire or electric shock. In this case, shut off the power supplied to the lens immediately.

**Caution!**

The Low Voltage power supply unit must comply with EN/UL 60950. The power supply must be a SELV-LPS unit or a SELV - Class 2 unit (Safety Extra Low Voltage - Limited Power Source).

**Caution!**

Installation should only be performed by qualified service personnel in accordance with the National Electrical Code (NEC 800 CEC Section 60) or applicable local codes.

**Caution!**

Do not leave or store the lens under direct sunshine.
The lens may focus rays of light on a near-by object and cause fire.

**Caution!**

In case of unusual behavior, smoke, noise or smell coming out of the lens, shut off the power immediately and pull out the lens cable.
Notify the installer or sales agent from which you purchased the product.

**Caution!**

Make sure to test the fire detection after updating to the latest firmware.

**Notice!**

Avoid obstructions in the field of view!

Covered fires cannot be detected correctly. An unobstructed view of the detection area is necessary.

**Notice!**

Activating video-based fire detection sets camera settings to a specific preset.

This preset affects several camera settings as long as this mode is activated.

**Notice!**

No detection of moving fire.

Moving fires will not be detected by the video-based fire detection.

**Notice!**

Indoor use only.

This product is designed for indoor use only. Outdoor use is not allowed.

**Notice!**

No direct connection to fire services in EN54 compliant installations.

Authorities can allow a connection to fire services after verifying alarms in a monitoring center.

**Notice!**

Minimum Illumination required.

To ensure the proper functioning of the video-based fire detection algorithm, a minimal illumination of 2 lx is required. If the illumination is less than 2 lx, an additional IR illumination is required.

**Notice!**

No existing standards.

There are no existing EN standards concerning the video-based fire detection.

**Notice!**

Calm wind conditions only.

Strong air currents can cause false alarms by raising dust or debris similar in appearance to fire and smoke.

**Notice!**

Respect data protection.

The relevant data protection and privacy rules are to be complied with.

**Notice!**

Avoid backlight.
Backlight can disturb the video-based fire detection algorithm.

**Notice!**

Optimized smoke detection.
The video-based fire detection algorithm is optimized for smoke of smoldering fires.

**Notice!**

Qualified personnel only.
Assembly and installation must only be performed by qualified personnel.

**Notice!**

Reduced detection distances at image margin area.
Due to optical distortion of the lens, the maximum detection distances at the image margin area are reduced.

**Notice!**

Avoid image regions with continuous upward motion.
Continuous upward motion might lead to false alarms.

**Notice!**

Make sure the camera is firmly mounted.
Camera shake might lead to false alarms. Avoid vibrations of the camera and the camera environment.

**Notice!**

No detection of irregular expanding smoke.
Smoke plumes must move in a constant direction with a minimum density to be detected by the video-based fire detection.

**Notice!**

Ensure that you are always using the latest version of the operation manual and the current camera firmware. The manufacturer will not be held liable for any damages resulting from the use of older versions.

**Notice!**

No detection in blinking light regions in the detection area.

**Notice!**

Only use the supplied lens or approved lenses.
Do not use other lenses. A reliable functioning of the product cannot be guaranteed with other lenses.

2 Introduction

2.1 Disclaimer

IMPORTANT: Video fire indication systems are video content analysis systems. They give indications for fires and are designed to supplement fire detection systems and human guards in monitoring centers.

Video fire indication systems are confronted with a higher amount of challenges considering scenery and background compared to conventional fire detection systems. It cannot be granted that fire is detected in all scenery settings. Thus, the video fire detection system shall be seen as a system that enhances the probability of early fire detection, with the restriction that it might detect false alarms. It shall not be seen as a system that ensures fire detection in all possible image scenarios.

Seller does not represent that the product will prevent any personal injury or property loss by fire or otherwise; or that the product will in all cases provide adequate warning or protection. Buyer understands that a properly installed and maintained alarm may only reduce the risk of a fire or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result.

Consequently, seller shall have no liability for any personal injury, property damage or other loss based on a claim the product failed to give warning.

2.2 About this manual

This manual has been compiled with great care and the information it contains has been thoroughly verified. The text was correct at the time of printing, however, the content can change without notice. Bosch Security Systems accepts no liability for damage resulting directly or indirectly from faults, incompleteness or discrepancies between this manual and the product described.

For more information please contact the nearest Bosch Security Systems location or visit www.boschsecurity.com.

All hardware and software product names used in this document are likely to be registered trademarks and must be treated accordingly.

The operation manual provides an overview of possibilities and fields of application of the video-based fire detection. It should be a guideline for customer-specific application planning.

2.3 Conventions in this manual

Terms concerning the adjustment of the smoke and flame algorithm, such as menu options, commands or text in the user interface, are written in bold.

2.4 Definition of optical terms

The reflected light coming from the field of view arrives at the camera lens. The image sensor of the camera transforms the light into electric signals. This electrical image is the basis for further data processing. This chapter contains basic descriptions of optical terms.

2.4.1 Illumination

**Notice!**

Different illumination levels can lead to different detection speeds. The poorer the ambient illumination, the less the smoke stands out against the background. For this reason, poor lighting < 7 lx may require a higher smoke density for reliable smoke detection.

Illumination is an important influencing factor for sensible optical systems. Natural light shows the huge range of illumination values from direct sunlight (~100.000 lx) to full moon on a clear night (~1.0 lx). A luxmeter can be used to measure the light levels.

The following table provides an overview of typical illumination values in different application areas:

Application Area	Illumination (in lx)
Storage facility	50
Process plants	200
Sales room	300
Office space	500

In general a uniformly illuminated monitoring area is advantageous for the video-based fire detection. Backlight should be avoided.


Dynamic range

The dynamic range is the ratio between the darkest spot compared to the lightest spot in the application. Use a luxmeter to determine the brightness in your application. The dynamic range in the camera image / the detection area must be equal or less than factor 5.

2.4.2

Focal length


The focal length of an optical system defines the distance between a light refracting lens and the focal point. Field of view, maximum distance and field angle are dependant as shown in the graphic below.

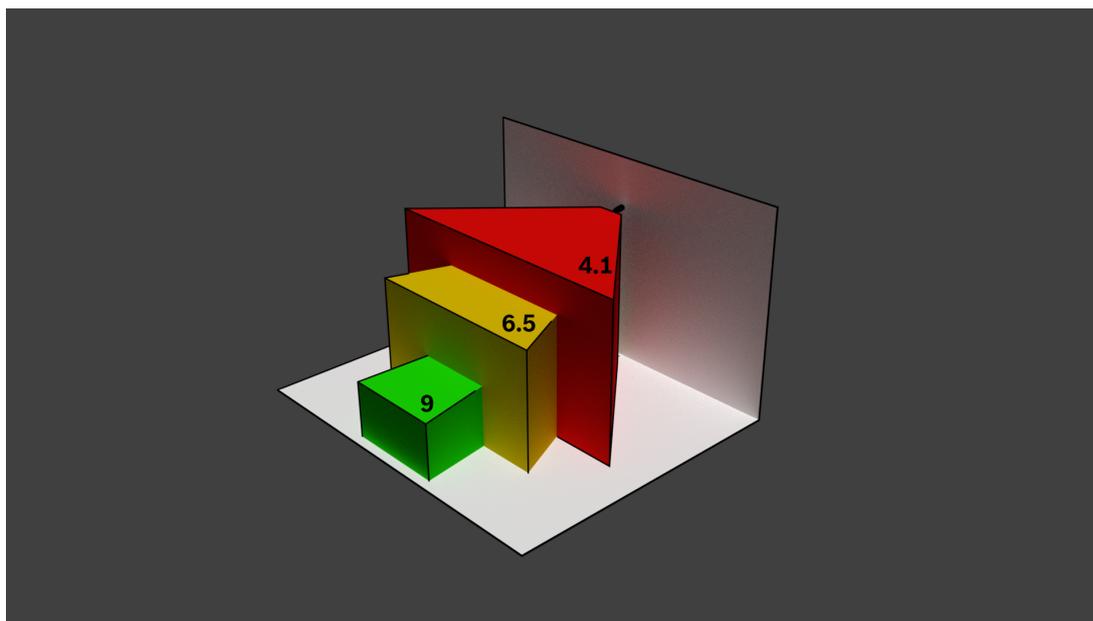

The maximum width of the field of view may be realized by the minimum focal length. This adversely affects the maximum distance to a detectable fire (red).

The maximum distance to a detectable fire may be reached by adjusting the largest focal length which decreases the width of the field of view to the minimum (green).

2.4.3 Monitoring Area

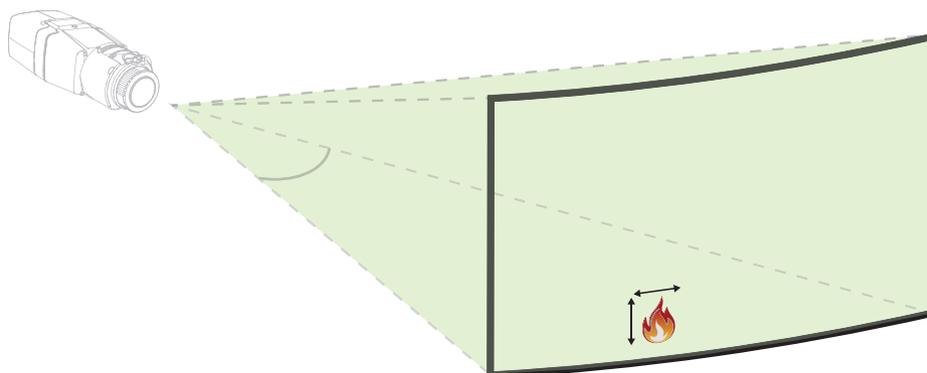


The monitoring area defines the effective space that can be observed by the video-based fire detection. It is depending on the setting of the camera lens.

2.4.4 Different angle types

There are different types of angles influencing the set-up of the camera. The following overview helps to get a better understanding of angles which are important for the video-based fire detection.


Angle between ground and line of sight

The angle between a fire on the ground and the line of sight to the camera is important for the flame and smoke detection. This angle needs to be 37.5% or less, otherwise flame or smoke will not be detected.

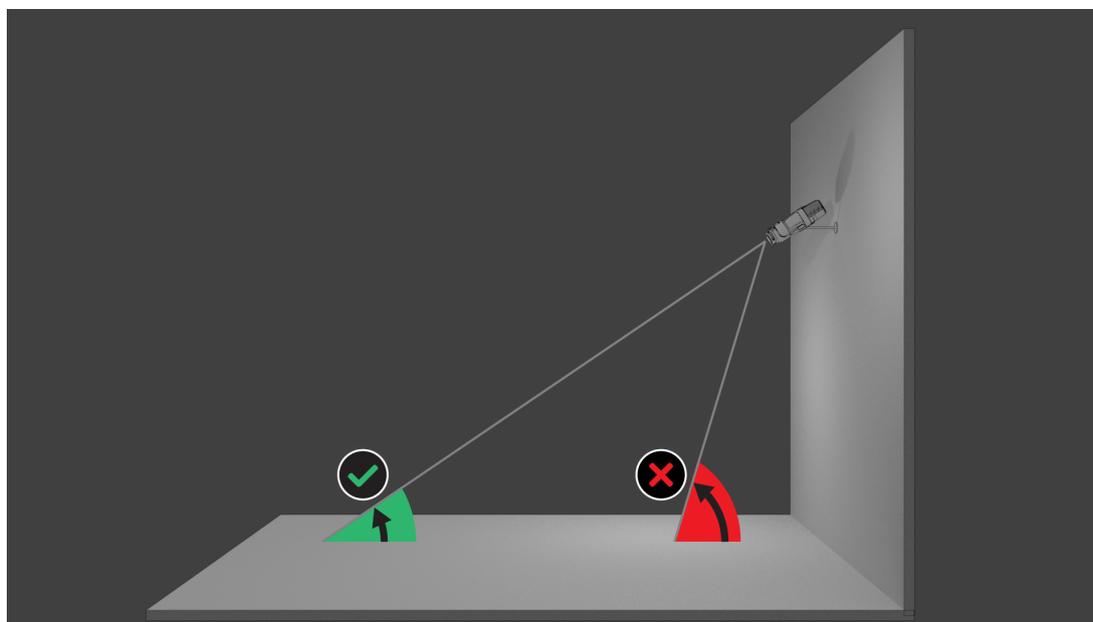


Opening angle of the lens

The opening angle of the lens can be set from wide-angle to telephoto setting. This influences the field of view of the camera.

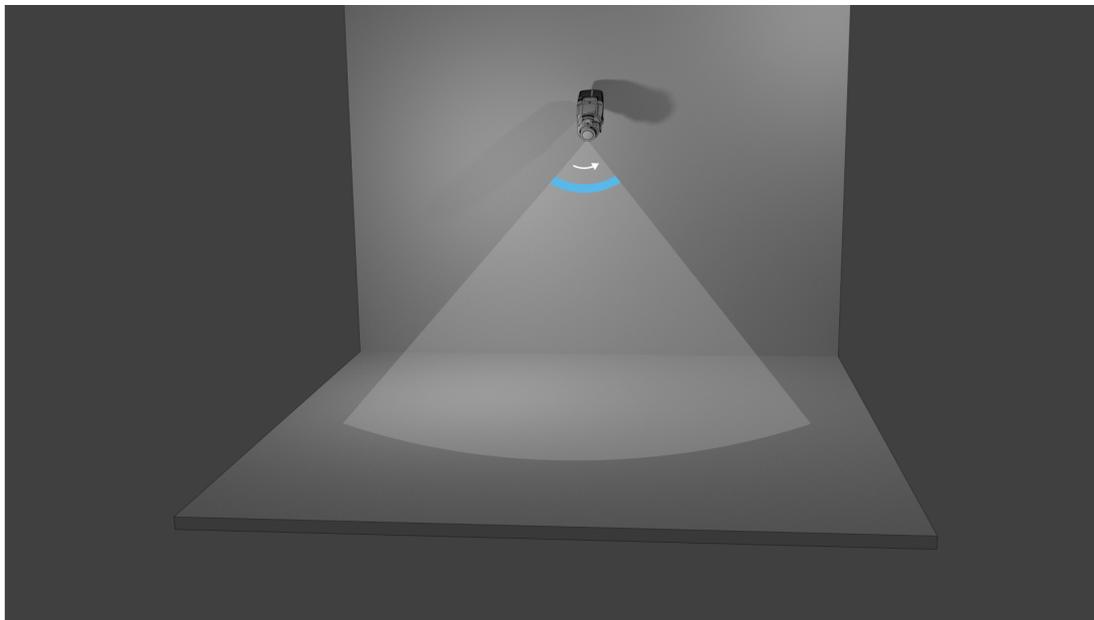


Angle for vertical alignment of the camera

The vertical alignment of the camera is also important for the video-based fire detection. A flat angle is recommended.

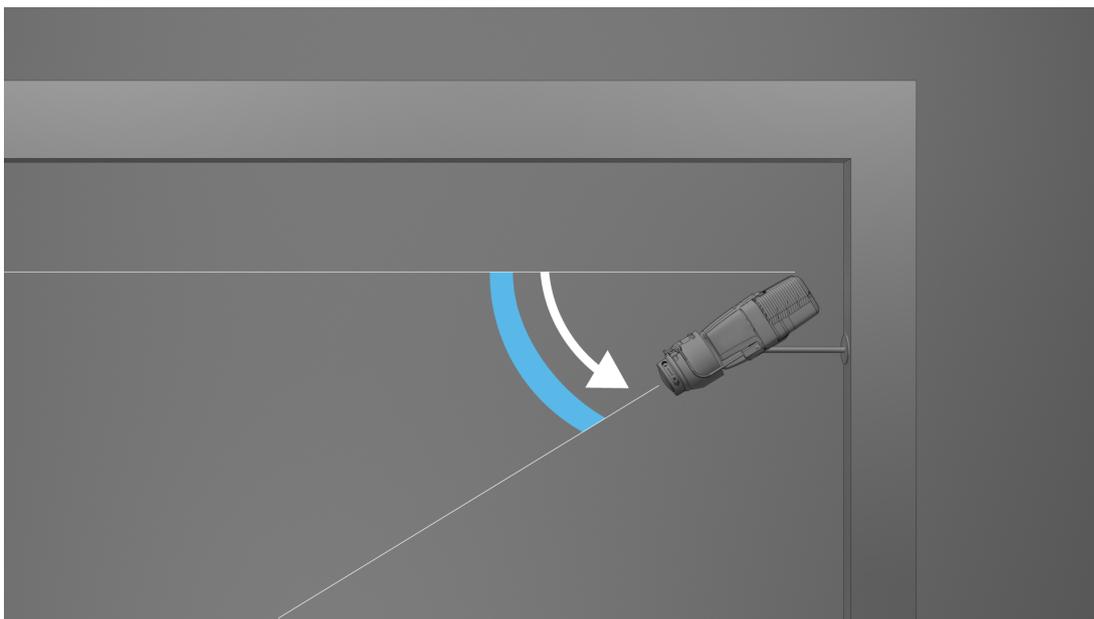


Angle for horizontal alignment of the camera

Align the camera according to your application by adjusting the angle of the horizontal alignment of the camera.

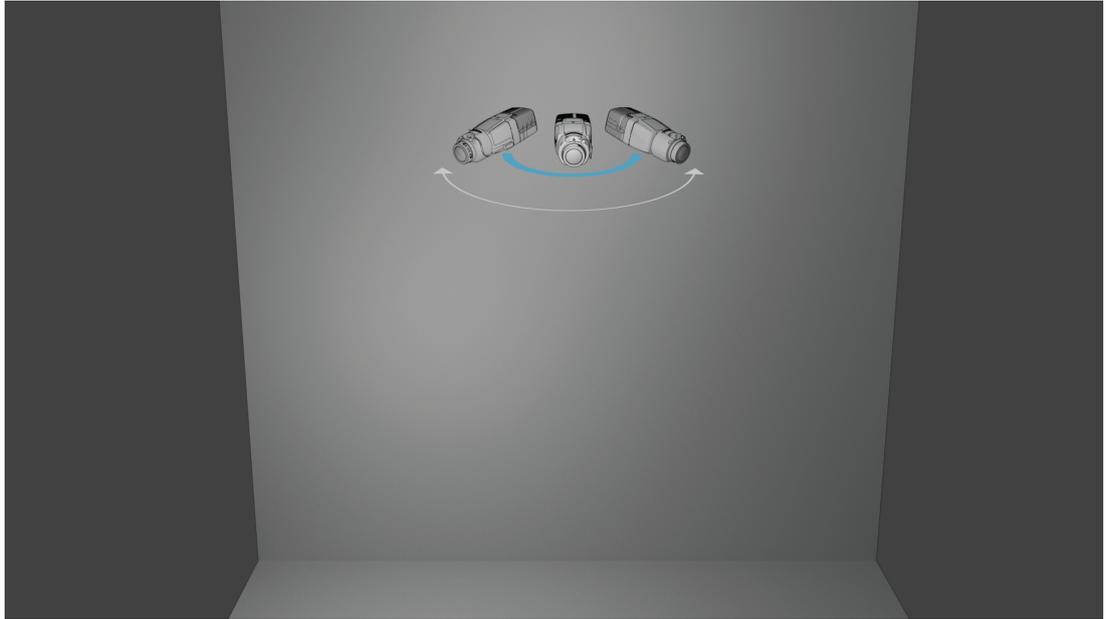

3 System Overview

The video-based fire detection is the system of choice when reliable video motion and fire detection is needed, e.g. applications which are not subjected to construction product regulation or a supplementation to existing fire detection systems. AVIOTEC IP starlight 8000 operates as stand-alone unit and doesn't need a separate evaluation unit. Furthermore, it contains all features of the Intelligent Video Analytics which allows analyzing and evaluating moving objects in parallel. Video-based fire detection and Intelligent Video Analytics operate independently from each other and are separately adjustable.

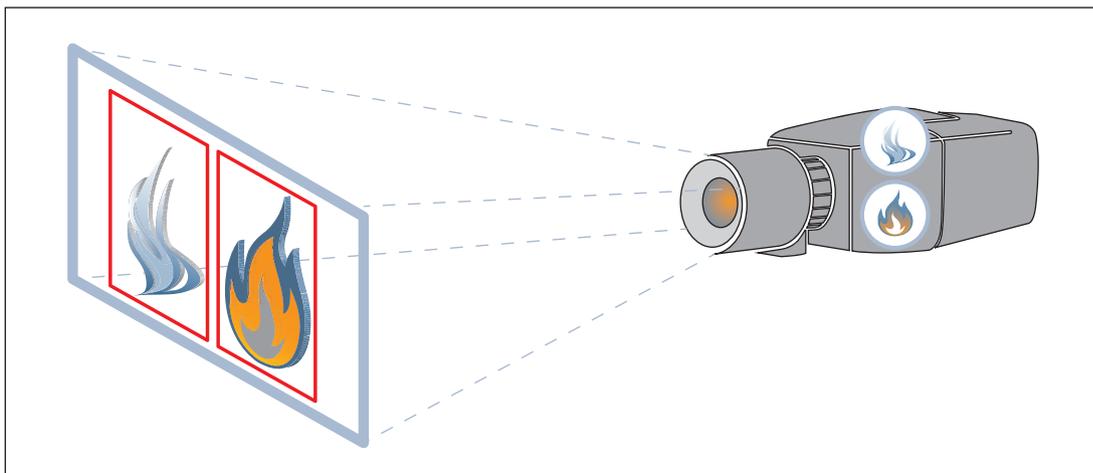

3.1 Algorithm

The intelligent smoke and flame algorithm analyzes video frames by means of characteristic and predefined patterns and variables. The fast detection algorithm is based on a real-time image processing on the camera firmware.

There are factors that can influence this kind of visual fire detection. It is important to avoid obstructions in the field of view. Sometimes obstructions cannot be prevented, e.g. building construction factors or huge machine parts. In this case it is necessary to analyze whether there is any need for further video-based fire detection cameras.

3.1.1 Flame detection characteristics

Flames will be analyzed by means of their behavior. Flickering, brightness and constant illuminated parts of white and orange are the basis colors for the algorithm to split off the video image into important and unimportant areas. Further flame colors will not be considered, for example a blue flame might not be detected.

Another algorithm characteristic to identify flames is the flickering of a flame. Objects with a similar movement pattern might cause false alarms, e.g. loose fluttering objects. The video-based fire detection offers subsequent adaption of flame detection settings for this purpose.

3.1.2 Smoke detection characteristics




Notice!

Different illumination levels can lead to different detection speeds. The poorer the ambient illumination, the less the smoke stands out against the background. For this reason, poor lighting < 7 lx may require a higher smoke density for reliable smoke detection.

The video-based fire detection is optimized for smoke of smoldering fires. The algorithm analyzes smoke based on physical characteristics. Typically a plume of smoke is formed in a regular upward motion of smoke at the same position. This is characterized by a thick column of smoke which is directly visible. Speed and angle of smoke may vary. The maximum detectable speed can be found in the chapter *Technical data, page 47*. Only color-neutral smoke (white, grey, black) will be detected by the smoke algorithm.

The area in which the smoke density decreases is called ambient smoke. The smoke motion is not directly visible. Ambient smoke will not be detected.

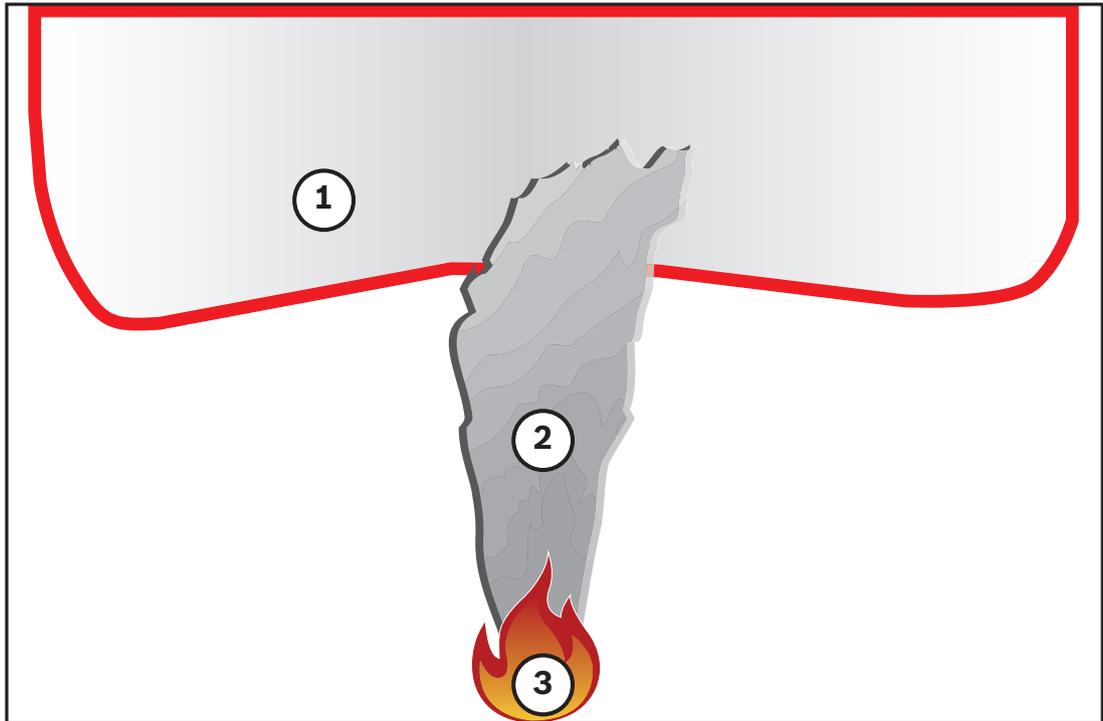


1	Ambient smoke
2	Smoke plume
3	Fire

Minimum smoke width and motion speed


A minimum speed of smoke is needed together with a minimum width of the smoke plume to be detected by the video-based fire detection. The minimum motion speed of smoke and the minimum width have to be reached at the same location in the smoke plume. It is not sufficient to measure one value at the bottom and the other value at the top of the smoke plume (see chapter *Technical data, page 47*).

Direction and angle of a smoke plume

The inclination angle and direction of a smoke plume are important indicators to detect smoke. In the field of view of the camera, moving smoke plumes can have a maximum tilt angle of 90° and will be detected.

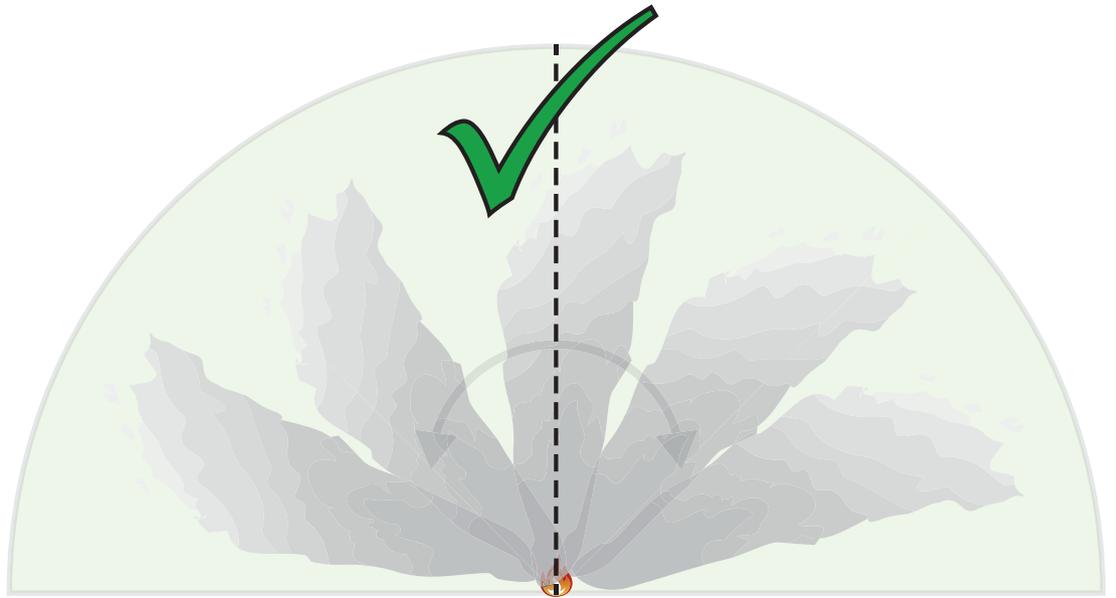

Smoke plumes must move in a constant direction with a minimum density to be detected by the video-based fire detection. Irregular expanding smoke and smoke plumes moving in the direction of the camera might not be detected.

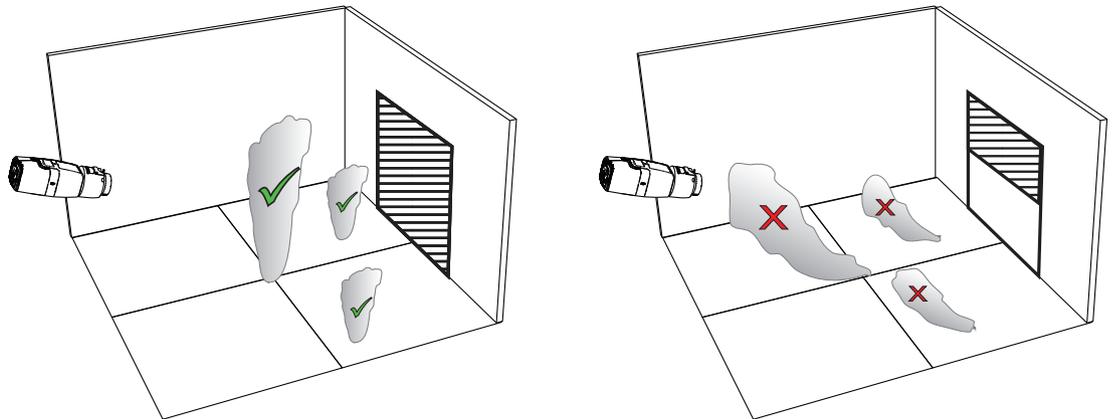

The intelligent smoke detection covers a large area of application. Nevertheless, there might be some disruptive factors in the operational environment of the customer. Objects with a similar movement pattern of smoke might cause false alarms, e.g. escalators or conveyor belts.

Smoke density

A minimum smoke density is required to identify the smoke plume.

The smoke density is described as the decrease of a local image contrast with the presence of smoke as seen in the following graphic:

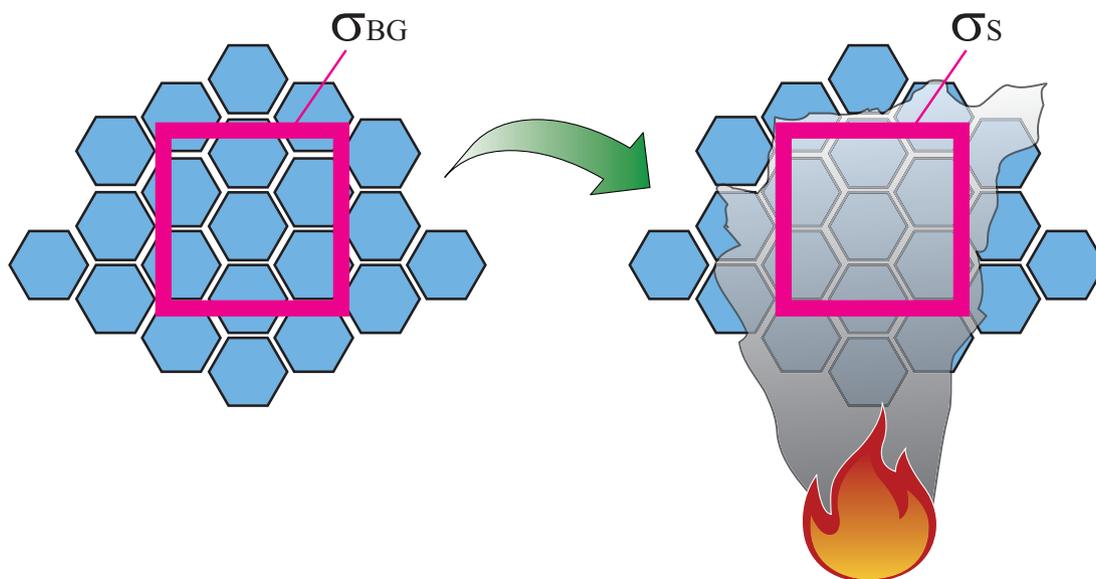



Figure 3.1: Smoke density definition

The effect of contrast reduction by smoke is described by the formula

$$d = \left(1 - \frac{\sigma_S}{\sigma_{BG}}\right) * 100\%$$

with the contrast values for a temporal average image with smoke σ_s and the contrast for the background σ_{bg} .

Exemplary images for smoke densities are shown in the following table:

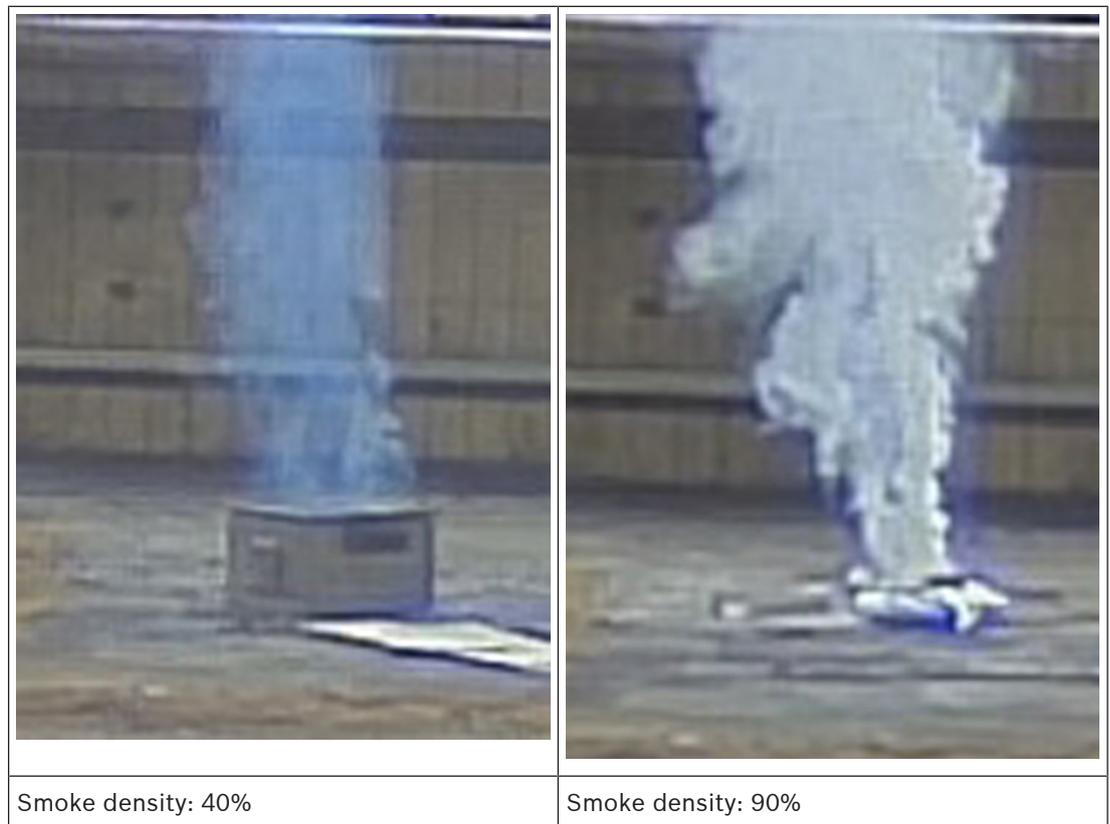

In regular conditions with an equal colored background, smoke is visible when the smoke density exceeds 40%.

In case of a background with high color saturation (e.g. deep blue) or a high background intensity or strong contrasts or very strong color contrast (e.g. black and white or blue and yellow) behind the smoke region the required smoke density can increase up to 90% before smoke is detected.

4 Installation

**Notice!**

Do not expose the image sensors to direct sunlight.
Do not obstruct the free flow of air around the camera.

**Notice!**

Avoid backlight.
Backlight can disturb the video-based fire detection algorithm.

**Notice!**

Minimum Illumination required.
To ensure the proper functioning of the video-based fire detection algorithm, a minimal illumination of 2 lx is required. If the illumination is less than 2 lx, an additional IR illumination is required.

**Notice!**

Avoid obstructions in the field of view!
Covered fires cannot be detected correctly. An unobstructed view of the detection area is necessary.

**Notice!**

Avoid image regions with continuous upward motion.
Continuous upward motion might lead to false alarms.

**Notice!**

Make sure the camera is firmly mounted.
Camera shake might lead to false alarms. Avoid vibrations of the camera and the camera environment.

4.1 Requirements

When installing the camera, take the following points into account or have prepared the following:

- Computer and its IP address
- Download of newest Firmware / Software tools
- IP range of the network
- Plan sketches with camera position and designation
- Planning of the camera setting (size flame/ smoke, verification time + sensitivity if available)
- Recording
- Required work equipment for configuration:
- POE power supply + camera connection
- Computer with admin rights and Internet access
- Download the latest firmware and tools (e.g. Configuration Manager)
- IP address range change on Computer
- A multimeter for testing the relay output
- Analog monitor and cable for camera alignment

4.2 Preparation in the office

We recommend that you prepare the installation in the office, as you can carry out many tasks here that are not recommended under time pressure and possibly on lifting platforms etc.

We recommend that you carry out the following steps in advance:

1. Labeling camera + cardboard

Unpack the camera and label it and the box with installation location and the later IP address.

1. Use PoE to power the camera.
2. Start the Configuration Manager and change the IP address of the camera according to the plan. You can perform steps 3 to 8 using the Configuration Manager.
3. Change the passwords for the users "service", "live", "user". If necessary, you can also create additional users.
4. Check that the firmware version installed on the camera is up to date and update it if necessary. Always test the fire detection after updating to the latest firmware.
5. Set the current time and date and assign a camera name if required.
6. Change the fire detection settings as planned.
7. Adjust the recording settings if necessary.

4.3 On-site commissioning

1. Install the camera at the planned installation site
2. Adjust the opening angle as planned and align the camera.
3. Focus the camera image on the lens and then use the lens wizard to fine-tune the focus.
4. Optional: If necessary, adjust the settings for fire detection to the conditions on site
5. Document all settings and screenshots of the viewing area in the customer documentation.


4.4 Lens mounting



Notice!


Only use the supplied lens or approved lenses.

Do not use other lenses. A reliable functioning of the product cannot be guaranteed with other lenses.

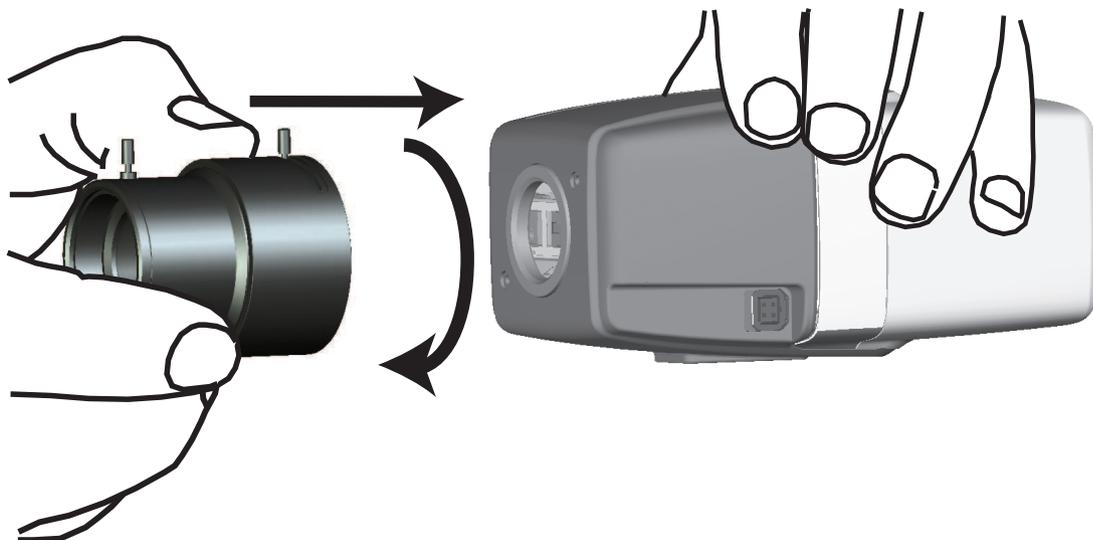

To attach the lens to the camera:

1. Remove the sensor protection cap from the camera.
2. Remove the protection cap from the lens.
3. Screw the lens onto the camera.

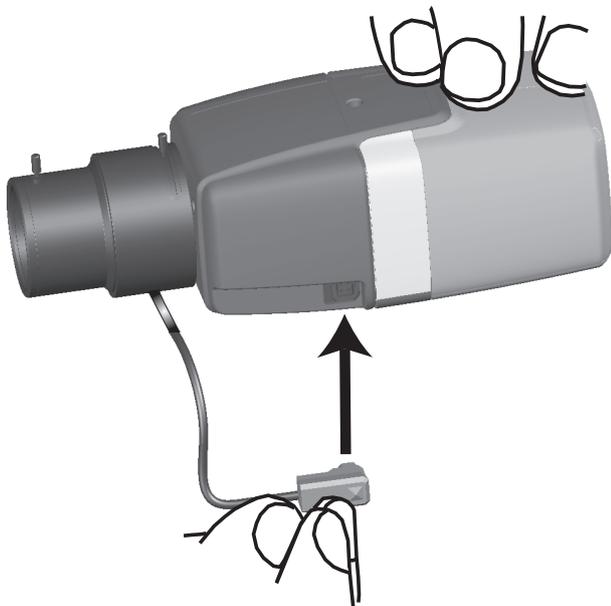

Plug the lens connector into the camera (it automatically detects the type of lens).

Pin	DC iris lens
1	Damp -
2	Damp +
3	Drive +
4	Drive -

4.5 Camera mounting

Mounting variants

Due to the provided mounting bracket, the camera can be easily mounted. There are three main mounting variants to install the camera.

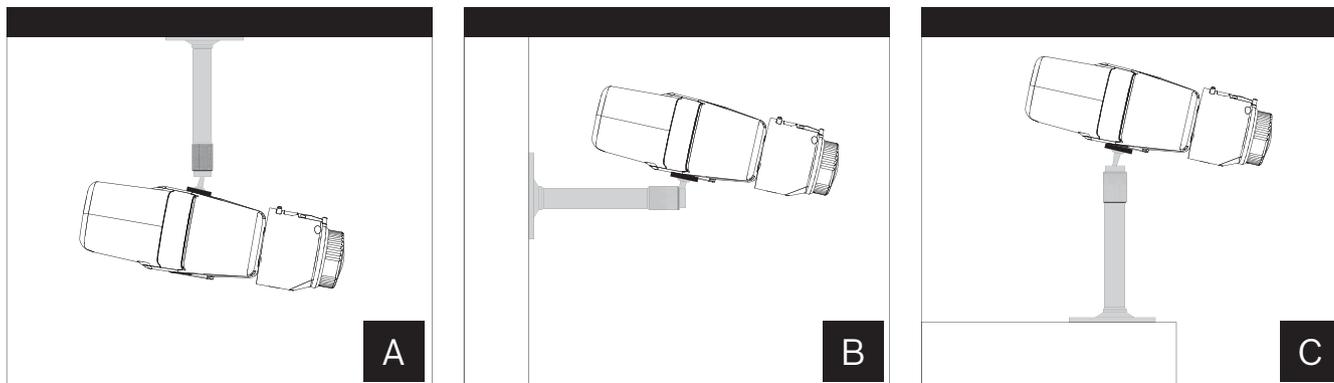


Figure 4.1: Mounting variants

A	Ceiling mount
B	Wall mount
C	Stand mount

Chose the right mounting variant for your application and mount the device according to the following options:

1. Install the mounting bracket.
2. Attach the camera to the bracket and tighten the camera lock ring.
3. Adjust the angle of the camera to set the field of view.
4. Tighten the mounting bracket lock ring to fix the camera in the desired position.

4.6 Setting the field of view

After the camera is mounted to the surface, the field of view can be set.



1	focal length
2	focus

The field of view must be set manually according to the following steps:

1. Manually adjust the focal length on the lens to obtain the required field of view.
2. Manually adjust the focus on the lens to obtain the sharpest image possible.
3. Focus the image in the center of the monitored area to avoid blurring as much as possible.

The camera lens has a motorized automatic back focus to adjust the focus at a later time via the camera menu.


4.7 Wiring of the camera

Connection to Ethernet via PoE Ethernet cable

**Notice!**

Use only PoE approved devices.

The camera is intended to be powered via a STP Category 5e cable in a Power-over-Ethernet (PoE) network environment . This is the default power supply.

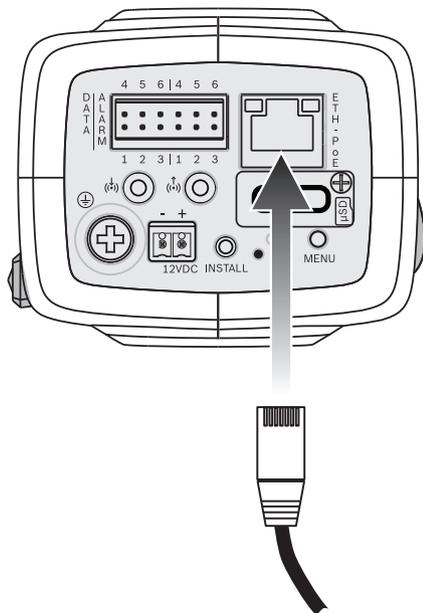

1. Connect the camera to a 10/100 Base-T network.
 2. Use STP Category 5e cable with RJ45 connectors (the camera network socket is Auto MDIX compliant).
- ✓ The LEDs beside the Ethernet connection indicate network connection (green lit) and IP traffic (orange flashing).

Auxilliary 12 V DC power supply



Caution!

Use **only** a +12 VDC power supply as an auxiliary power source. The auxiliary power supply unit must be isolated from earth.



Caution!

The Low Voltage power supply unit must comply with EN/UL 60950. The power supply must be a SELV-LPS unit or a SELV - Class 2 unit (Safety Extra Low Voltage - Limited Power Source).


The camera can be supplied with a power supply in case of missing PoE feature of the network or for redundancy reasons.

Connect an approved power supply unit with a rated supply voltage of 12 VDC as follows:

1. Strip back 7 mm (0.28 in) of insulation on the power supply cable (must be 16-28 AWG, UL 14-30 AWG).
2. Loosen the screws of the supplied 2-pole connector and insert the stripped wires, then tighten the screws again.
3. Insert the 2-pole connector into the camera power socket.

4.8 Alarm output

The alarm contact assignment is shown in the figure below:

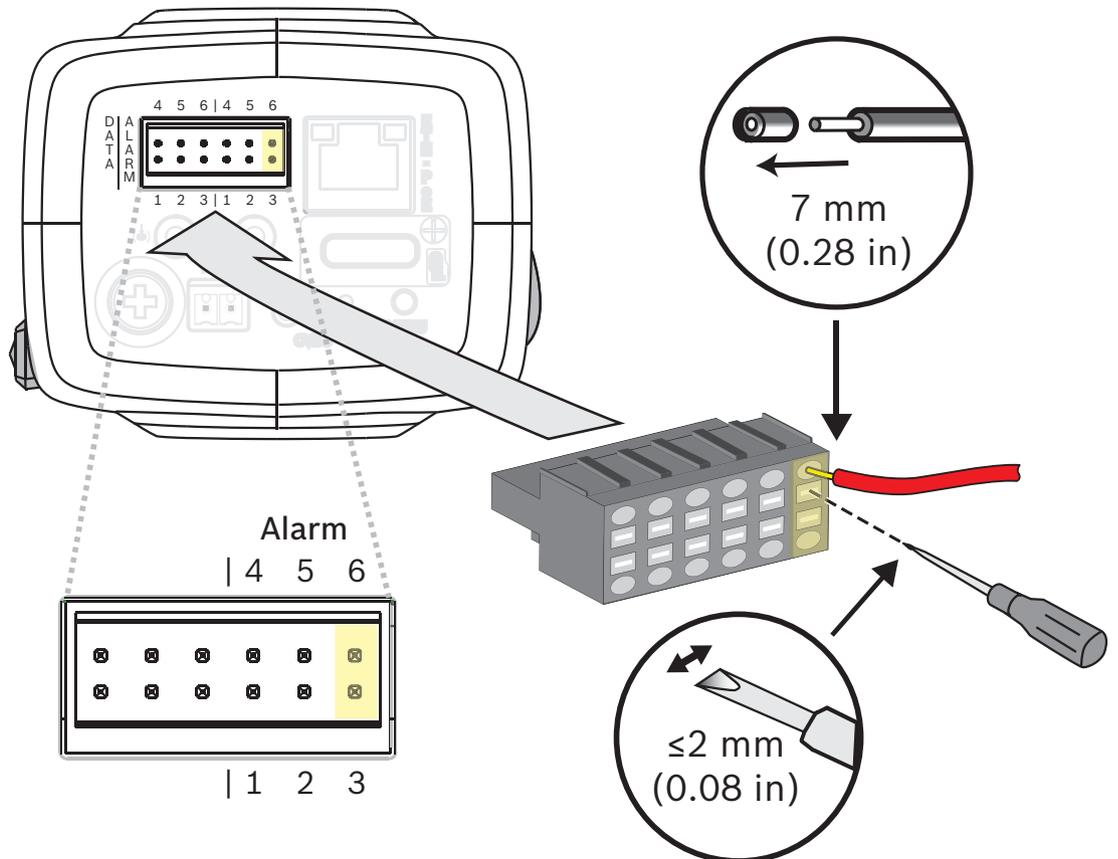

Alarm out

Use the alarm output for switching external devices such as lamps or sirens.

Alarm output switching capability:


- Max. voltage 30 VAC or +40 VDC. Max. 0.5 A continuous, 10 VA.

Pin	Alarm socket
3	Alarm out
6	

The maximum wire diameter is 18-28 AWG, UL 16-28 AWG for both stranded and solid; cut back 7 mm (0.28 in) of insulation.

4.9**Alarm input**

The alarm contact assignment is shown in the figure below:

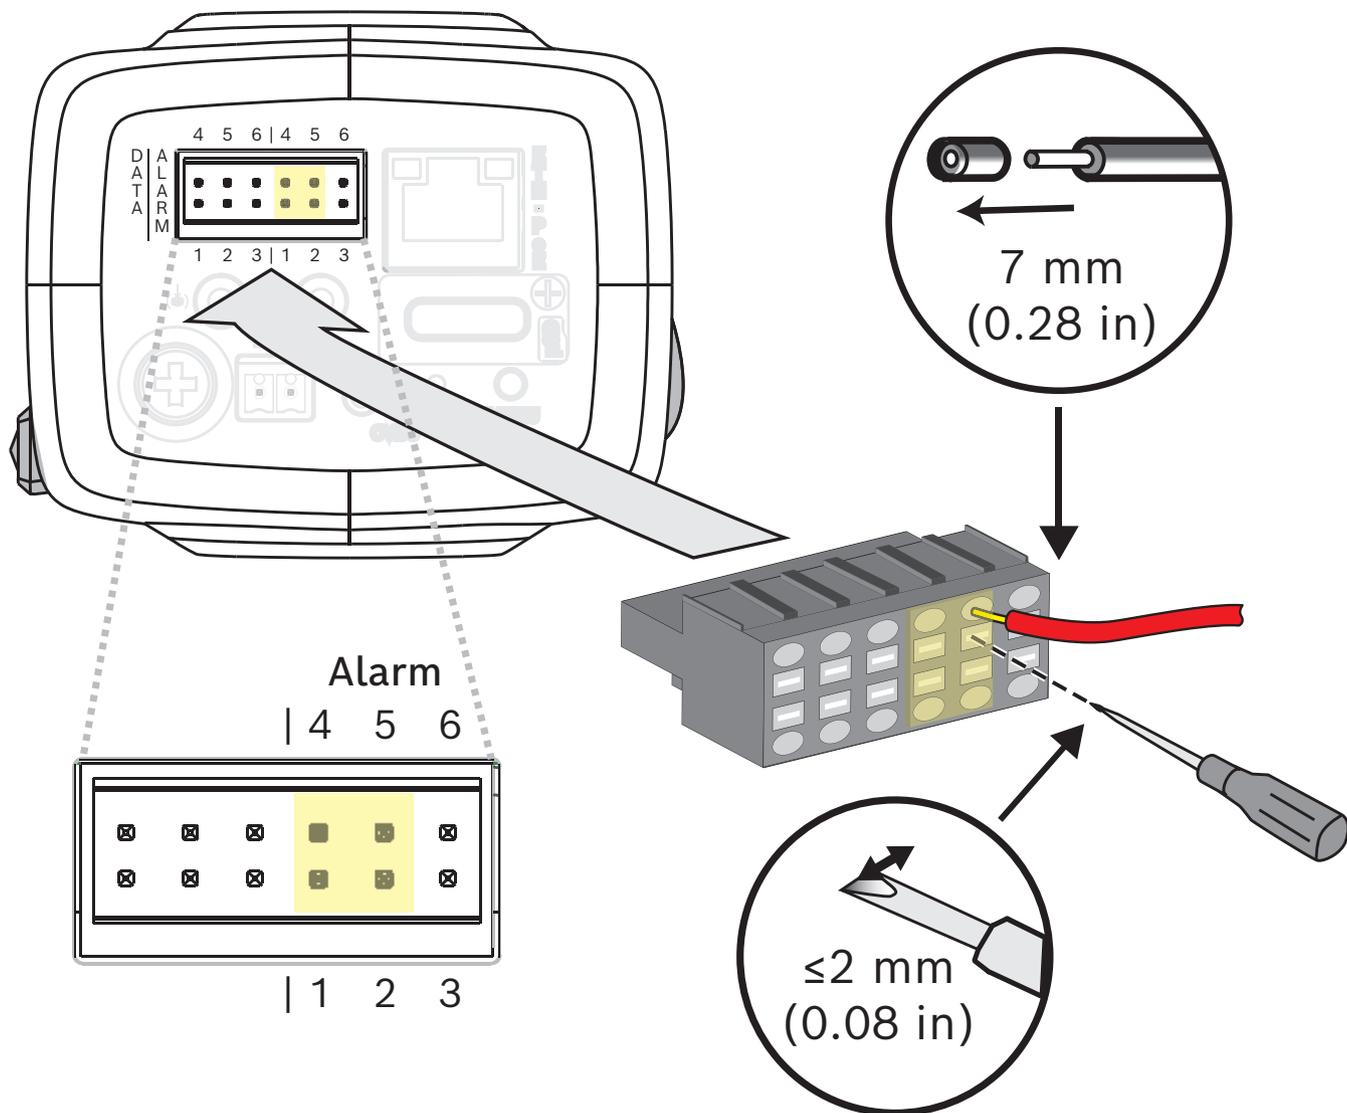

Alarm in:

Use the alarm input to connect external alarm devices such as door contacts or sensors:

- TTL logic, +5 V nominal, +40 VDC max, DC coupled with 50 kOhm pull-up to +3.3 V.
- Configurable as active low or active high.

A zero potential make-contact or switch can be used as the actuator (use a bounce-free contact system).

Pin	Alarm socket
1	Alarm in 1
4	Ground






Pin	Alarm socket
2	Alarm in 2

Pin	Alarm socket
5	Ground

The maximum wire diameter is 18-28 AWG, UL 16-28 AWG for both stranded and solid; cut back 7 mm (0.28 in) of insulation.

5 Camera integration


The video-based fire detection can be easily integrated into the network environment of the customer. There are several possibilities to connect the camera. Various combinations are possible. The individual customer network properties determine the performance and scalability of the system.

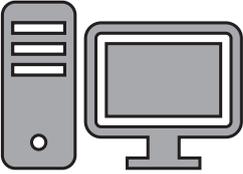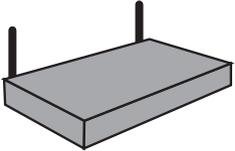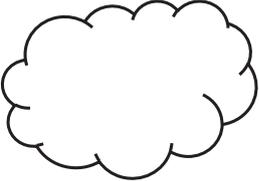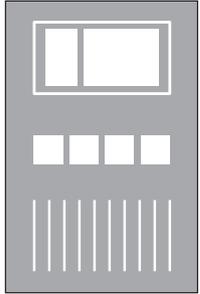	Camera
	Network switch, PoE-ready
	Client PC
	Video Recording Manager (VRM)
	Router
	Internet
	Monitoring Center
	Fire alarm control panel




5.1 Local Area Network

Due to the IP-based camera, the integration of the video-based fire detection into the network of the customer is easy. There are a lot of opportunities regarding to scalability and enlargement of the network.

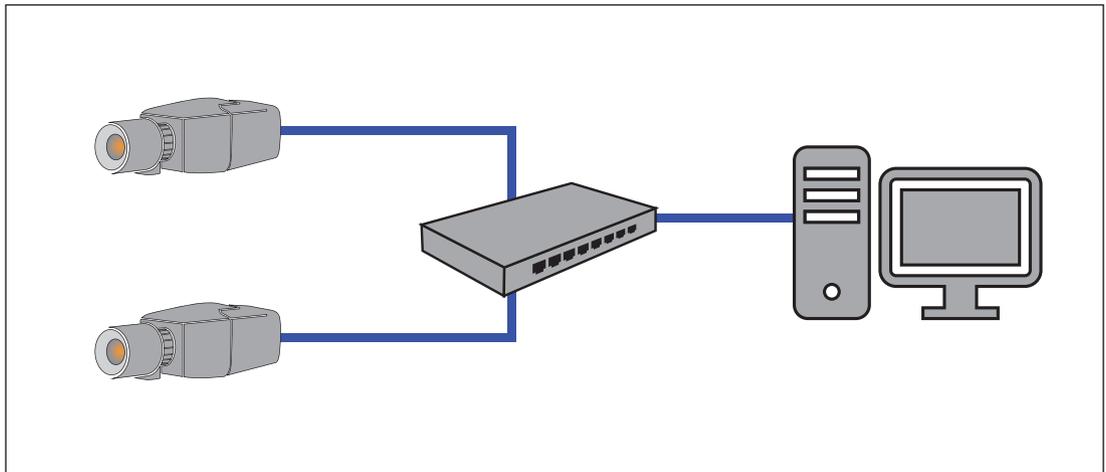


5.2 Local Area Network with recording solution

Recording and archiving functionality in the network can be realized by a video recording manager (VRM). Fire cause analysis and traceability due to legal matters are only two examples of a recording solution.

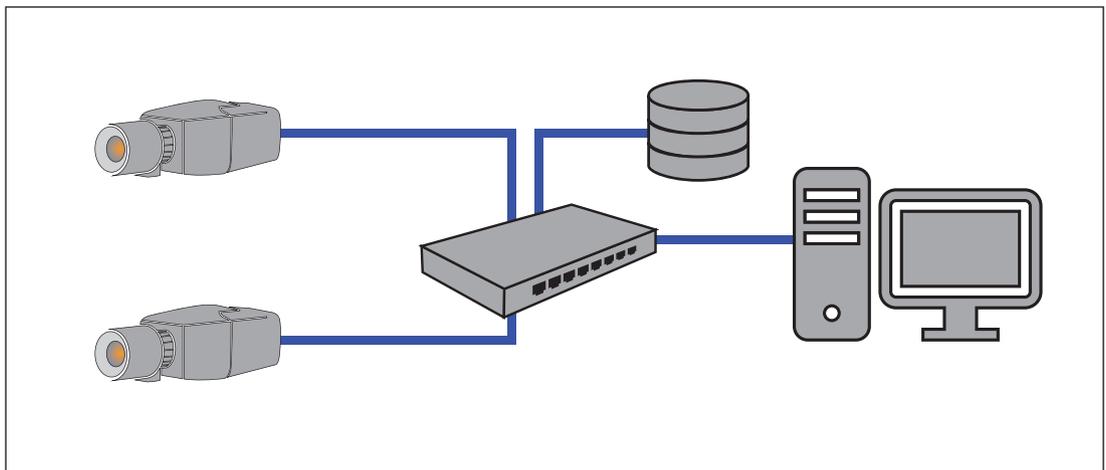

5.3 Monitoring Center

In a monitoring center, alarms can be verified to call the fire brigade and to take care of additional rescue measures.

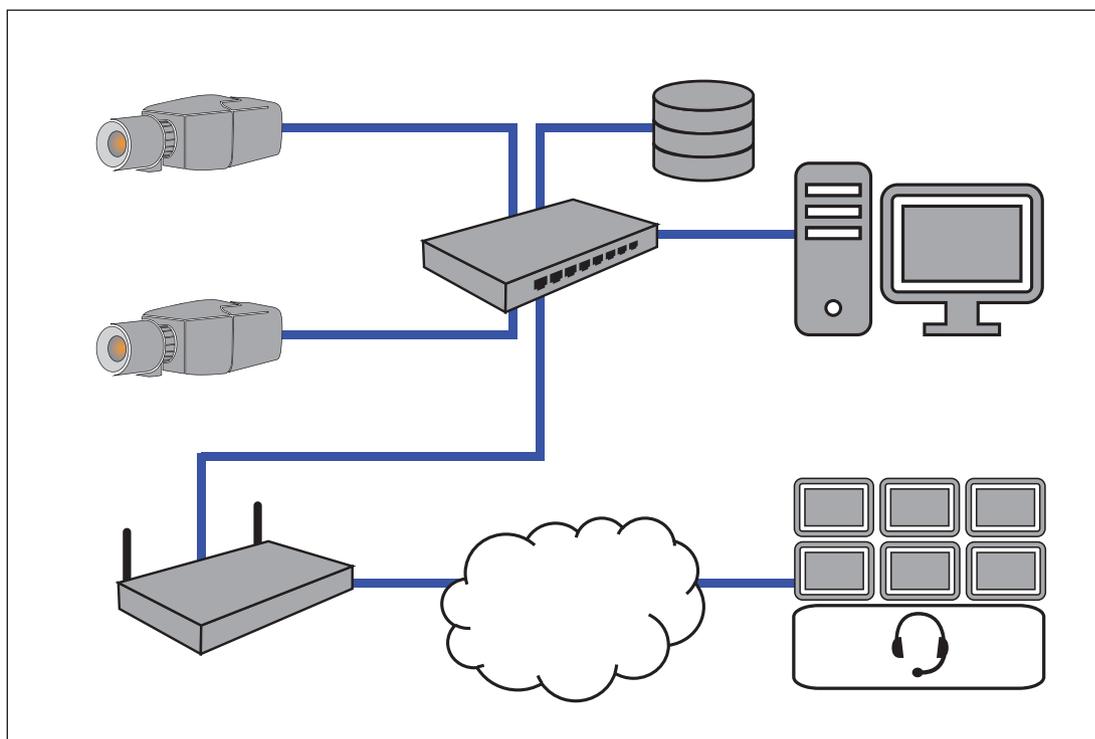

5.4 Fire Alarm Control Panel

AVIOTEC IP starlight 8000 can be connected to the a fire alarm control panel. The alarm will be triggered by the relay output of the camera.




Notice!

No direct connection to fire services in EN54 compliant installations. Authorities can allow a connection to fire services after verifying alarms in a monitoring center.



Notice!


No existing standards. There are no existing EN standards concerning the video-based fire detection.

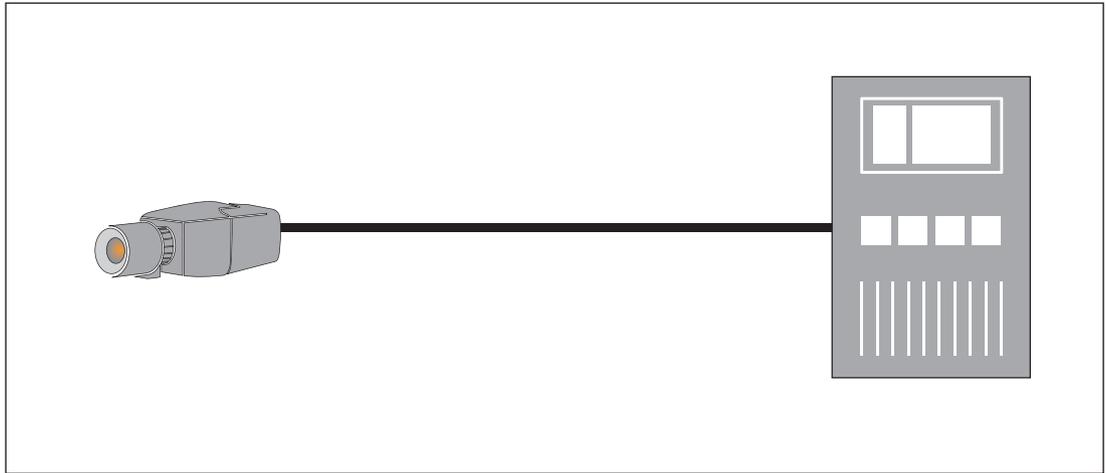

Connection to a fire alarm control panel

The alarm output of the camera can be connected to a fire alarm control panel.


The camera alarm output is triggered by a relay that is normally open. In case of alarm the relay is closed.

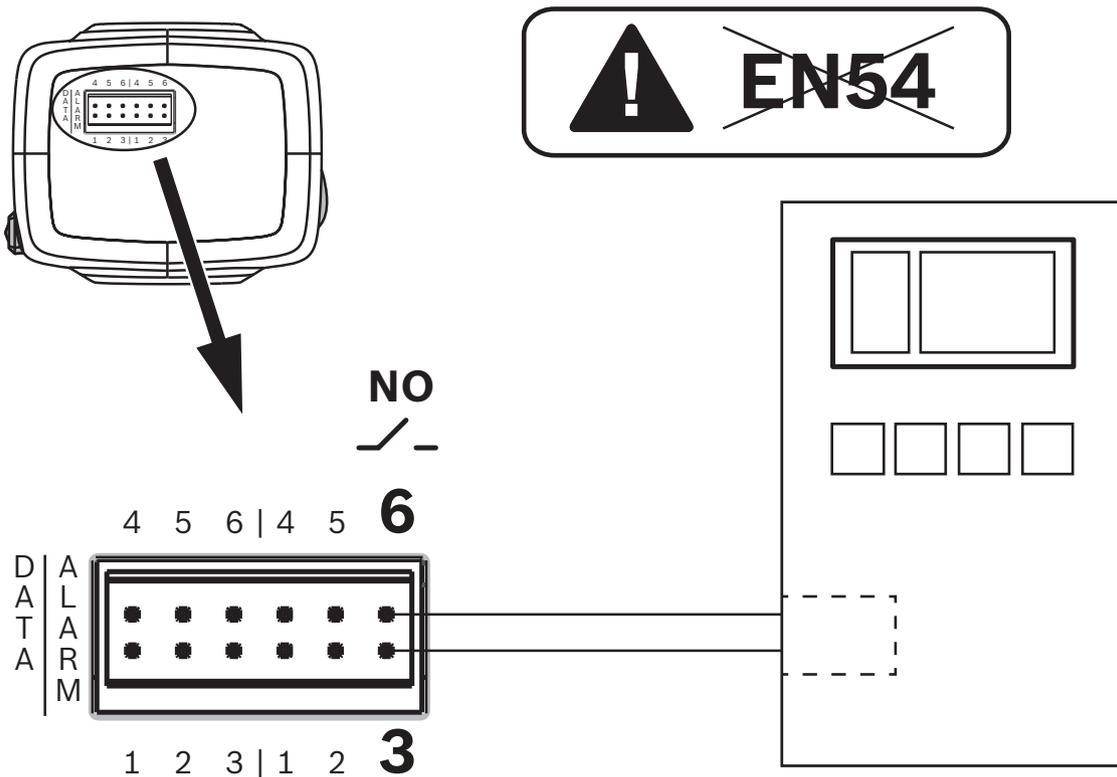

See the documentation of the individual manufacturer for further information about the connection to a fire alarm control panel.

5.5 Mobile Devices

Another advantage of the network integration of the video-based fire detection is the expandability to mobile devices, such as tablets or smartphones.

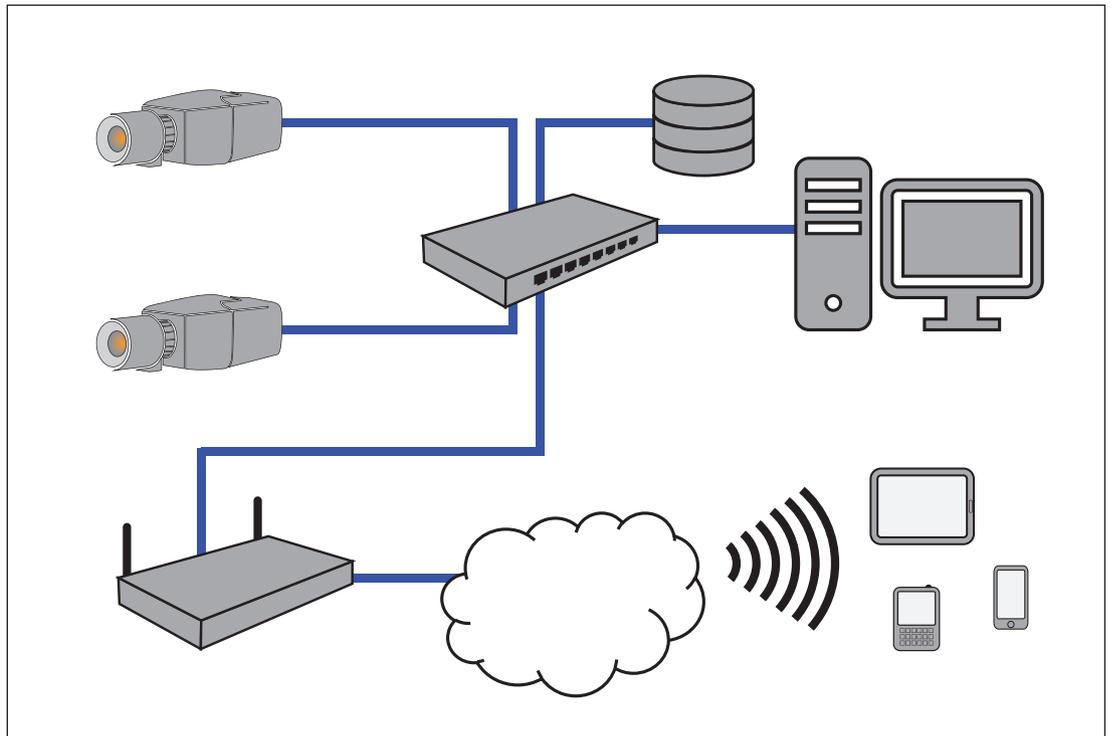

6 Access to the device

The unit must have a valid IP address and a compatible subnet mask to operate on your network.

If the network has a DHCP server for the dynamic assignment of IP addresses, select **On** or **On plus Link-Local** to automatically accept the DHCP-assigned IP address.

If no DHCP server is available select **On plus Link-Local** to automatically assign a Link-Local (Auto-IP) address.

For certain applications, the DHCP server must support the fixed assignment between IP address and MAC address, and must be appropriately set up so that, once an IP address is assigned, it is retained each time the system is rebooted.

6.1 Access via web interface

Please note that an Internet Explorer with activated ActiveX plugin is required. The plugin is available at <https://downloadstore.boschsecurity.com/> .

1. Open the Internet Explorer.
2. Enter the IP address of the camera to get access to the web interface.

6.2 Configuration Manager

You can also get access to the camera via Configuration Manager available at <https://downloadstore.boschsecurity.com/> .

7 Adjustment of detection settings

The standard settings of the video-based fire detection will be sufficient for the most customer environments. Nevertheless, there are many ways to adapt the flame and smoke detection to the requirements of the customer. The detection settings of the fire detection can be changed in the configuration menu:

1. Go to **Configuration** and navigate to **Alarm**.
2. Select **Fire detection**.



Notice!

The VCA settings affect the Fire detection settings.

You can create three individual profiles for Fire detection. These different Fire detection profiles can also be used in a scheduled configuration (see Setting up VCA):

- Silent VCA
- profile #1 (renameable in VCA settings)
- profile #2 (renameable in VCA settings)

General and special settings for **Fire detection** are selectable. Anytime you change the settings, confirm with **Set** to apply these changes.

If you want to abort, just click on another menu option, for example **Audio Alarm**.

The Intelligent Video Analytics functions and the video-based fire detection settings can be changed during operation and will immediately become effective.

7.1 General settings

Following settings change the detection algorithm generally.

Flames

The default setting of the flame size is 1.1% of the picture width.

Verification time [s] of the flame detection can be set to 4, 8, 12 or 16 seconds. The default value is 8 seconds. Small values cause faster detection (higher risk of false alarms), larger values decrease false alarms.

Smoke

The default setting of the smoke size is 1.6% of the picture width.

Verification time [s] of the smoke detection can be set from 10 to 30 seconds. The default value is 15 seconds. Small values cause faster detection (higher risk of false alarms), larger values decrease false alarms.

Sensitivity

In case of false alarms, you can use a software slider to adapt the value **Sensitivity** for flame and smoke to your specific needs. The following table shows the different settings:

	Sensitivity		
	low	mid	high
Smoke	<ul style="list-style-type: none"> - High contrast and colored objects in the video image cause false alarms. (recommendation: set also Verification time [s] to 20s) - Slow moving objects (e.g. cranes, slow vehicles, automatic doors) cause false alarms. (recommendation: set also Verification time [s] to 20s) 	Default setting	If no moving objects are expected.
Flames	Blinking lights or fans cause false alarms. (recommendation: set also Verification time [s] to 12s)	Default setting	If no moving objects and no blinking lights are expected.

7.2 Adjustments of image regions



Notice!

There is no fire detection in privacy defined masks created in the Intelligent Video Analytics.

Masking

Due to the different areas of application of the camera, false alarms may be the result in individual customer environments. Algorithm disturbing elements which have an appearance similar to flames and smoke, for example ascending steam of a machine, must be excluded from the detection area.

Customized areas can be defined in the picture of the camera. These individual masks for flame and smoke detection deactivation allow individual adaption to the application of the customer. Overlapping of masks is possible.

There are several possibilities to exclude picture areas from the smoke and flame detection:

- Add masks separately for flame, smoke or both.
- Individually adjust the verification time in a mask.
- Let the system automatically generate masks from the alarm memory by automasking.

Automasks support the user to adapt the system to his individual application area. Once the camera is powered, every upcoming alarm will be stored into the volatile alarm memory. Generally it is advantageous to wait a certain period of time before using the automasking feature for the first time. It depends on the special customer environment, whether there will be false alarms or not. With automasking, detection disturbing areas in the picture can automatically be masked out by the system. If there is no alarm, no automask will be generated. The user can change the size of the automasks to minimize the masked out area. The system is limited to 16 automasks (8 masks for smoke detection and 8 masks for flame detection). Changes of the flame and smoke detection settings require renewing the automasks.

Add mask

You can define individual areas (16 in total) in which the detection can be deactivated or modified. These masks can easily be added to the picture area.

To add a mask, perform the following steps:

1. Click on the button **Add mask**.

A rectangle will appear in the middle of the picture area.

In **Properties** you can select the following options:

Ignore flames

The detection of flames are disabled in the mask. This is shown by a crossed out flame icon at the bottom right-hand corner.

Ignore smoke

The detection of smoke are disabled in the mask. This is shown by a crossed out smoke icon at the bottom right-hand corner.

Ignore flames and smoke

The detection of flames and smoke are disabled in the mask. This is shown by a crossed out smoke and a crossed out flame icon at the bottom right-hand corner.

Verification time smoke

The following settings (in seconds) are possible to assign an individual verification time

for each mask: 5 ... 120. A clock icon with a small smoke plume is displayed at the bottom right-hand corner.

Verification time flames

The following settings (in seconds) are possible to assign an individual verification time for each mask: 4 / 8 / 12 / 16. A clock icon with a small flame is displayed at the bottom right-hand corner.

2. Change the size and shape of the rectangle to your specific needs.
3. Move the mask to the desired area in the picture.
4. Select **Set** to confirm the changes.

Automask



Notice!

All automasks stored in the volatile alarm memory of the camera are lost when the supply voltage is interrupted or switched off. Automasks that already have been saved will remain unaffected.



Notice!

If you change the settings of **Verification time [s]**, it is necessary to renew the automasks.

1. Navigate to **Configuration > Alarm > Fire detection**.
 2. Select **Automask**
The system automatically generates predefined masks from the alarm memory. The automasks are illustrated as rectangles with red dashed border.
 3. Adjust the automask to your specific needs.
If it is necessary, you can add individual masks (**Add mask**).
 4. Select **Set** to confirm the changes.
- ✓ Automasks were added to the system.

Reset user interface



Notice!

All determined masks in the user interface will be deleted! Only automasks remain stored in the alarm memory and can be regenerated.

If you want to reset the user interface to standard values:

1. Click on **Defaults**.
 2. Press **OK** to confirm.
- ✓ The system resets the user interface for fire detection to the standard settings.

Delete Automasks



Notice!

Delete automasks if you changed the camera position, zoom, point of view or after a fire. Also delete automasks if the spatial arrangement of objects in the detection area has changed fundamentally.

To delete the automasks for Flame detection from the alarm memory:

1. Navigate to **Fire detection > Flames > Detection**.
 2. Select **Off** and press **Set**.
 3. Select **On** and press **Set**.
- ✓ Automasks for Flame were deleted.

To delete the automasks for Smoke detection from the alarm memory:

1. Navigate to **Fire detection > Smoke > Detection**.
 2. Select **Off** and press **Set**.
 3. Select **On** and press **Set**.
- ✓ Automasks for Smoke were deleted.

7.3 Adaptation to the lighting situation

The lighting can vary greatly from application to application. You can adjust the following settings to the lighting situation.

7.3.1 General lightning settings

There are three different settings in the camera menu that are important for lighting in relation to video-based fire detection:

Go to **Camera > Installer Menu > Day/Night**. You can select the following settings:

Auto - the camera switches the IR cut-off filter on and off depending on the scene illumination level. Select this setting if you have continuous natural or artificial light in your application and at least 2 lx are available or you have artificial light and redundant IR lightning.

Monochrome - the IR cut-off filter is removed, giving full IR sensitivity. Select this setting if you have continuous IR lightning in your application.

Color - the camera always produces a color signal regardless of light levels. Select this setting if you have continuous natural or artificial light in your application.

7.3.2 Flickering

Select the mode for automatic light-level control:

- Fluorescent 50 Hz
- Fluorescent 60 Hz
- Outdoor

7.4 Relay settings



Notice!

The alarm output is only configurable for flame or smoke alarms. Forwarding alarms coming from Intelligent Video Analytics is not possible.

The camera includes a built-in relay that switches in case of a flame or a smoke alarm. The relay is switched during the alarm and returns to its initial state after the alarm.

You can configure the switching behavior of the output:

Go to **Alarm > Interfaces > Alarm Outputs**

Idle state

1. Under **Idle state** select the desired initial state of the relay.
2. Select from the following options:
 - Closed:** the relay is normally closed.
 - Open:** the relay is normally open.

Output name

An individual name can be assigned to the relay. The name is shown on the button. The **Live** page can also be configured to display this individual name.

Toggle

You can click the button to switch the alarm output manually (for example, for testing purposes). A green check mark appears to indicate that the relay switches.



Notice!

Check carefully the toggle settings before you continue.

Press **Set** to apply the settings.

8 Use cases

Fire detection in combination with VCA functionality offers different use cases. These four use cases are described below.

8.1 Fire detection only

This is the standard setting of the camera. You can choose this standard option if different fire detection profiles and profile scheduling are not necessary for your application. In case you need to adapt the general fire detection settings, please refer to chapter *Adjustment of detection settings, page 33*.

8.2 Fire detection and VCA profiles

If you want to use fire detection and video surveillance functions, e.g. detect unauthorized access, you can create two individual VCA profiles. Please be aware that only **one** VCA profile can be active at a time. The fire detection profile depends on the corresponding VCA profile and these are always active simultaneously. For example if you choose VCA profile #1, the Fire detection profile #1 is enabled. If you choose VCA profile #2, the Fire detection profile #2 is enabled.

	Silent VCA (VCA not configurable)	VCA profile #1	VCA profile #2
Fire detection (Silent VCA)	linked (see <i>Fire detection only, page 39</i>)	x	x
Fire detection (VCA profile #1)	x	linked	x
Fire detection (VCA profile #2)	x	x	linked

How to change the VCA profiles:

1. Go to **Configuration > Alarm > VCA** .
2. In **VCA configuration** choose the corresponding profile.
3. Set up and modify the VCA profile (refer to the IVA documentation for more information and IVA settings).
4. Go to **Configuration > Alarm > Fire detection**.
5. Set up the corresponding fire detection profile (see *Fire detection only, page 39*).

8.3 Scheduled fire detection

In many industrial applications you have a lot of movement during the day and very little movement at night. A scheduled configuration allows you to link a VCA profile with the days and times at which the video content analysis is to be active. Schedules can be defined for weekdays and for holidays.

1. Go to **Configuration > Alarm > VCA** .

2. In the **VCA configuration** drop-down list, select **Scheduled**.

Link any number of 15-minute intervals with the VCA profiles for each day of the week. Moving the mouse cursor over the table displays the time below it. This aids orientation.

1. Click the profile to link in the **Time periods** field.
2. Click in a field in the table, hold down the mouse button and drag the cursor over all the periods to be assigned to the selected profile.
3. Use the right mouse button to deselect any of the intervals.
4. Click **Select All** to link all time intervals to the selected profile.
5. Click **Clear All** to deselect all of the intervals.
6. When finished, click **Set** to save the settings in the device.

Define holidays on which a profile should be active that are different to the standard weekly schedule.

1. Click the **Holidays** tab. Any days that have already been selected are shown in the table.
2. Click **Add**. A new window opens.
3. Select the desired date from the calendar. Select several consecutive calendar days by holding down the mouse button. These will later be displayed as a single entry in the table.
4. Click **OK** to accept the selection. The window closes.
5. Assign the individual holidays to the VCA profiles, as described above.

Deleting Holidays

Delete defined holidays at any time:

1. Click **Delete**. A new window opens.
2. Click the date to delete.
3. Click **OK**. The item is deleted from the table and the window closes.
4. The process must be repeated for deleting additional days.



Notice!

If you have not yet created any fire detection profiles (see *Fire detection and VCA profiles*, page 39), you must do so and go to **Configuration > Alarm > Fire detection**.

Refer to

- *Fire detection and VCA profiles*, page 39

8.4

External trigger to switch fire detection mode

This configuration allows you to change the VCA profile / fire detection profile when triggered by an event.

- ▶ In the **VCA configuration** drop-down list, select **Event triggered**.

The camera offers two alarm inputs (see chapter *Alarm input*, page 24).

1. In **Configuration** select **Trigger**.
2. Select a physical alarm (alarm input) as a trigger, choose **Alarm input 1** or **Alarm input 2**.
3. In **Trigger active** select the VCA configuration that is to be enabled via an active trigger. A green check mark to the right of the list field indicates that the trigger is active.
4. In **Trigger inactive** select the VCA configuration that is to be activated if the trigger is not active. A green check mark to the right of the list field indicates that the trigger is inactive.

Delay [s]

Select the delay period for the reaction of the video content analysis to trigger signals. The alarm is only triggered after a set time interval in seconds has elapsed and then only if the triggering condition still exists. If the original condition has been restored before this time interval elapses, the alarm is not triggered. A delay period may be useful in avoiding false alarms or frequent triggering. During the delay period, the **Silent VCA** configuration is always enabled.

- ▶ Go to **Interfaces**, select **Alarm Inputs** and adapt the corresponding alarm input to your needs.

**Notice!**

If you have not yet created any fire detection profiles (see *Fire detection and VCA profiles*, page 39), you must do so and go to **Configuration > Alarm > Fire detection**.

One example would be an environment with cleaning cycles. A key switch can be used as an external trigger to switch between the different fire detection profiles.

Refer to

- *Alarm input*, page 24

9 Troubleshooting

The following issues can be solved in the detection settings (**Configuration > Alarm > Fire detection**).

9.1 False Alarms

9.1.1 Quick solution to solve false alarms

A fast way to identify and solve region-stable false alarms in the camera image is automasking. The system automatically generates predefined masks from the alarm memory.

Navigate to **Configuration > Alarm > Fire detection**.

2. Select **Automask**.
3. Select **Set** to confirm the changes.

Refer to

- *Automask, page 36*

9.1.2 False alarms under 4 seconds concerning the whole detection area

In this case the general settings of the fire detection have to be adjusted.

Problem	Solution
Short false alarms for smoke detection.	Increase the duration of smoke detection. (Smoke > Verification time [s])
Short false alarms for flame detection.	Increase the duration of flame detection. (Flames > Verification time [s])

9.1.3 False alarms at small constant areas

Individual image areas are affected and have to be adjusted.

Problem	Solution
Objects cause flickering motion, e.g. shadow of a flag in the wind.	Mask out the disturbing image area (for flame). Flame detection will be deactivated in this mask.
Continuous motion in the picture causes false alarms, e.g. escalators.	Mask out the disturbing image area (for smoke). Smoke detection will be deactivated in this mask.
Temporary motion causes false alarms, e.g. roller shutter.	Mask out the disturbing image area (Add smoke time region). Smoke detection will be delayed in this mask.

9.1.4 Vibrations at the camera site

Problem	Solution
Vibrations are transferred to the camera.	Avoid vibrations at the camera site.
Camera picture is trembling.	Make sure the camera is firmly mounted.
The camera position changed because of vibrations.	Move the camera to its initial position and check the field of view. Make sure the camera is firmly mounted.

9.2 No alarm transmission

Problem: Alarms are visible in the web browser but there is no alarm transmission to the video client.

Solution:

- Check network connection and settings (**Configuration -> Network**)
- Check relay connection and settings (**Alarm > Interfaces > Alarm Outputs**)
- Check fire detection settings (**Configuration > Alarm > Fire detection**)
- Check the video client settings

9.3 No fire detection

- **Problem:** No detection of fire.
- **Solution:**
- Check fire detection settings (**Configuration > Alarm > Fire detection**)
- Check mask settings
- Check privacy mask settings
- Check the focus of the lens (**Configuration -> Camera -> Installer Menu -> Lens Wizard... ->)**
- Check obstructions in the field of view
- Check the detection area
- Check minimum/maximum distance to fire

9.4 Image quality

Interference of the camera image

Small image areas or the whole image area are affected by interferences.

Problem	Solution
Artificial light, e.g. fluorescent light, causes flickering of the camera image.	Go to Installer Menu > ALC mode and change to fluorescent mode.

9.5 Camera

If a fault cannot be resolved, please contact your supplier or system integrator, or go directly to Customer Service.

The version numbers of the internal firmware can be viewed on a service page. Please note this information before contacting Customer Service.

1. In the address bar of your browser, after the unit IP address, enter: /version
for example: 192.168.0.80/version
2. Write down the information or print out the page.

The camera offers a variety of configuration options. Therefore, check that it works properly after installation and configuration. This is the only way to ensure that the camera will function as intended in the event of an alarm.

Your check should include the following functions:

- Can you connect to the camera remotely
- Does the camera transmit all the data required?
- Does the camera respond as desired to alarm events?
- Is it possible to control peripheral devices, if necessary?

The camera has four LEDs on the rear panel:

- Two LEDs indicate the camera status (red for error; green for OK)
- Two LEDs (green and orange) beside the network connection indicate the LAN and PoE status

No OSD messages appear.	Special Video SDK is required. Video management software from third parties does not use the SDK.
-------------------------	---

The ping command can be used to check the connection between two IP addresses. This allows testing whether a device is active in the network.

1. Open the DOS command prompt.
2. Type *ping* followed by the IP address of the device.

If the device is found, the response appears as "Reply from ... ", followed by the number of bytes sent and the transmission time in milliseconds. Otherwise, the device cannot be accessed via the network. This might be because:

- The device is not properly connected to the network. Check the cable connections in this case.
- The device is not correctly integrated into the network. Check the IP address, subnet mask, and gateway address.

10 Maintenance

10.1 Cleaning

It is generally sufficient to use a dry cloth for cleaning, but a moist lint-free cloth or leather shammy may also be used.

Do not use liquid cleaners or aerosol cleaners.

It is important to keep the lens clean to ensure optimum performance. Dust, grease, or fingerprints should be removed from the lens surface. When cleaning the lens, take extra care not to damage the special coating used to reduce light reflections.

- Remove dust with a blower-brush or grease-free soft brush.
- Wipe water drops off the lens with a clean soft lint-free cloth and dry the lens surface.
- Use special lens cleaning paper or cloth treated with lens cleaning fluid to gently wipe off any remaining dirt (wipe spirally from the lens center towards the edge).

10.2 Repair



Notice!

Never open the casing of the unit

The unit does not contain any user-serviceable parts. Refer all repairs to suitable qualified specialists.

10.3 Reset

Use the factory reset button to restore the unit to its original settings. Any changes to the settings are overwritten by the factory defaults. A reset may be necessary, for example, if the unit has invalid settings that prevent it from functioning as desired.

10.4 Maintenance intervals



Notice!

Maintenance and inspection work should be carried out regularly and by trained personnel.

The following inspections are recommended:

Testing	Inspection frequency		
	annually	quarterly	regularly
Visual check of the mounting		X	
Visual check for damage		X	

Testing	Inspection frequency		
Item to inspect	annually	quarterly	regularly
Check the camera lens for pollution and damage			X
Functional check	X		
Check of the video image			X

11

Technical data

Algorithm Overview	
Min. detection size for Smoke, standard setting (% of picture width)	1.6
Smoke speed (% of picture height /s)	0.7 - 8.4
Min. Smoke density (%)	40
Min. detection size for Flame, standard setting (% of picture width)	1.1
Min. illumination level (lx)	2
Min. illumination level with IR illumination (lx)	0

Environmental	
Operating Temperature	-20°C to +50°C (-4°F to 122°F)
Storage Temperature	-30°C to +70°C (-22°F to +158°F)
Operating Humidity	20% to 93% RH
Storage Humidity	up to 98% RH

Input/output	
Analog video out	SMB connector, CVBS (PAL/NTSC), 1 Vpp, 75 Ohm
Audio line in	1 Vrms max, 18 kOhm typical,
Audio line out	0.85 Vrms at 1.5 kOhm typical,
Audio connectors	3.5 mm mono jack
Alarm input	2 inputs
Alarm input activation	+5 VDC nominal; +40 VDC max. (DC-coupled with 50 kOhm pull-up resistor to +3.3 VDC) (< 0.5 V is low; > 1.4 V is high)
Alarm output	1 output
Alarm output voltage	30 VAC or +40 VDC max. Maximum 0.5 A continuous, 10VA (resistive load only)
Ethernet	RJ45
Data port	RS-232/422/485

Local storage	
Internal RAM	10 s pre-alarm recording
Memory card slot	Supports up to 32 GB microSDHC / 2 TB microSDXC card. (An SD card of Class 6 or higher is recommended for HD recording)

Local storage	
Recording	Continuous recording, ring recording, alarm/events/schedule recording

Mechanical	
Dimensions (W x H x L)	78 x 66 x 140 mm (3.07 x 2.6 x 5.52 inch) without lens
Weight	855 g (1.88 lb) without lens
Color	RAL 9006 Metallic Titanium
Tripod Mount	Bottom and top 1/4-inch 20 UNC
Sustainability	PVC free

Network	
Protocols	IPv4, IPv6, UDP, TCP, HTTP, HTTPS, RTP/RTCP, IGMP V2/V3, ICMP, ICMPv6, RTSP, FTP, ARP, DHCP, APIPA (Auto-IP, link local address), NTP (SNTP), SNMP (V1, V3, MIB-II), 802.1x, DNS, DNSv6, DDNS (DynDNS.org, selfHOST.de, no-ip.com), SMTP, iSCSI, UPnP (SSDP), DiffServ (QoS), LLDP, SOAP, Dropbox™, CHAP, digest authentication
Encryption	TLS1.0/1.2, AES128, AES256
Ethernet	10/100 Base-T, auto-sensing, half/full duplex
Connectivity	Auto-MDIX
Interoperability	ONVIF Profile S; ONVIF Profile G; GB/T 28181

12 Appendices

Maximum detection distances for margin areas

Due to the optical distortion of the lens, there are deviating maximum detection distances at the margin area of the picture.

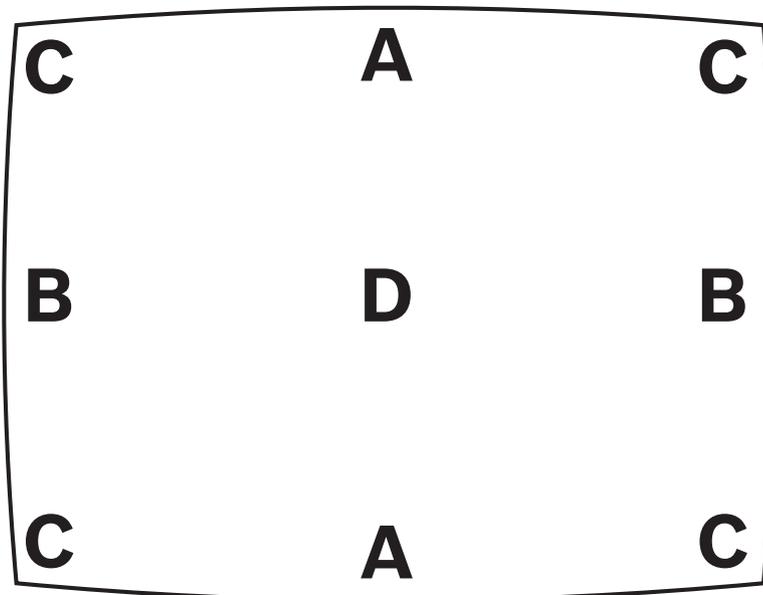


Figure 12.1: Definition of margin areas of the picture

A	Horizontal margin area
B	Vertical margin area
C	Corner area
D	Center

12.1 LVF-5005C-S4109 (standard lens)

12.1.1 Flame detection

Opening angle 100°

Fire width (m)	A	B	C	D
0.3	15.8	10.9	8.8	18.2
0.5	26.5	18.2	14.7	30.4

0.75	39.8	27.3	22.1	45.7
1	53.1	36.5	29.5	60.9
1.25	66.4	45.6	37.0	76.2
1.5	79.7	54.7	44.3	91.4
2	106.3	73.0	59.2	121.9
2.5	132.9	91.3	74.0	152.4
3	159.5	109.6	88.8	182.9

Opening angle 90°

Fire width (m)	A	B	C	D
0.3	17.6	13.2	11.8	19.7
0.5	29.4	22	19.7	32.9
0.75	44	33	29.5	49.3
1	58.8	44.1	39.4	65.8
1.25	73.4	55.1	49.2	82.2
1.5	88.2	66.1	59.1	98.7
2	117.6	88.2	78.8	131.6
2.5	147	110.3	98.5	164.5
3	176.4	132.3	118.3	197.4

Opening angle 75°

Fire width (m)	A	B	C	D
0.3	21.2	17.4	16.0	22.8
0.5	35.4	29.1	26.7	38.0
0.75	53.1	43.7	40.1	57.0
1	70.8	58.2	53.5	76.0
1.25	88.5	72.8	66.8	95.0
1.5	106.2	87.4	80.2	114.0
2	141.6	116.5	107.0	152.0
2.5	177.1	145.7	133.8	190.1
3	212.5	174.9	160.6	228.1

Opening angle 60°

Fire width (m)	A	B	C	D
0.3	26.1	23.4	21.9	27.6
0.5	43.6	39.1	36.6	46.1

0.75	65.4	58.6	54.9	69.1
1	87.3	78.2	73.3	92.2
1.25	109.1	97.7	91.6	115.2
1.5	131.0	117.3	110.0	138.3
2	174.7	156.4	146.7	184.4
2.5	218.3	195.5	183.4	230.5
3	262.0	234.6	220.1	276.6

Opening angle 45°

Fire width (m)	A	B	C	D
0.3	35.0	32.8	32.1	36.0
0.5	58.3	54.8	53.6	60.0
0.75	87.5	82.2	80.4	90.0
1	116.7	109.6	107.2	120.0
1.25	145.9	137.0	134.0	150.0
1.5	175.2	164.5	160.9	180.1
2	233.6	219.3	214.6	240.1
2.5	292.0	274.2	268.2	300.1
3	350.5	329.1	321.9	360.2

12.1.2

Smoke detection

Opening angle 100°

Fire width (m)	A	B	C	D
0.3	11.1	7.6	6.2	12.8
0.5	18.5	12.7	10.3	21.3
0.75	27.9	19.1	15.5	32.0
1	37.1	25.5	20.6	42.6
1.25	46.4	31.9	25.8	53.3
1.5	55.8	38.3	31.0	64.0
2	74.3	51.1	41.4	85.3
2.5	93.0	63.9	51.8	106.7
3	111.6	76.7	62.1	128.0

Opening angle 90°

Fire width (m)	A	B	C	D
0.3	12.3	9.2	8.2	13.8

0.5	20.5	15.4	13.7	23.0
0.75	30.8	23.1	20.6	34.5
1	41.1	30.8	27.5	46.0
1.25	51.3	38.5	34.4	57.5
1.5	61.6	46.2	41.3	69.0
2	82.3	61.7	55.1	92.1
2.5	102.8	77.1	68.9	115.1
3	123.4	92.6	82.7	138.1

Opening angle 75°

Fire width (m)	A	B	C	D
0.3	14.8	12.1	11.1	15.9
0.5	24.7	20.3	18.7	26.6
0.75	37.1	30.5	28.0	39.9
1	49.5	40.7	37.4	53.2
1.25	61.9	50.9	46.8	66.5
1.5	74.3	61.1	56.1	79.8
2	99.1	81.5	74.9	106.4
2.5	123.9	101.9	93.6	133.0
3	148.7	122.4	112.4	159.7

Opening angle 60°

Fire width (m)	A	B	C	D
0.3	18.2	16.3	15.3	19.3
0.5	30.5	27.3	25.6	32.2
0.75	45.8	41.0	38.5	48.4
1	61.1	54.7	51.3	64.5
1.25	76.3	68.3	64.1	80.6
1.5	91.7	82.1	77.0	96.8
2	122.2	109.4	102.6	129.0
2.5	152.8	136.8	128.3	161.3
3	183.4	164.2	154.0	193.6

Opening angle 45°

Fire width (m)	A	B	C	D
0.3	24.5	23.0	22.5	25.2

0.5	40.8	38.3	37.5	42.0
0.75	61.3	57.5	56.3	63.0
1	81.7	76.7	40.7	84.0
1.25	102.1	95.9	50.9	105.0
1.5	122.6	115.1	112.6	126.0
2	163.5	153.5	150.2	168.1
2.5	204.4	191.9	187.8	210.1
3	245.3	230.3	225.3	252.1

12.2

LVF-8008C-P0413

12.2.1

Flame detection

Opening angle 100°

Fire width (m)	A	B	C	D
0.3	15.6	10.6	8.3	18.4
0.5	26.0	17.7	13.8	30.7
0.75	39.1	26.6	20.8	46.1
1	52.2	35.5	27.7	61.5
1.25	65.3	44.4	34.7	76.9
1.5	78.4	53.3	41.6	92.3
2	104.6	71.1	55.5	123.1
2.5	130.8	88.9	69.4	153.9
3	156.9	106.7	83.3	184.7

Opening angle 90°

Fire width (m)	A	B	C	D
0.3	17.3	12.9	10.6	19.8
0.5	28.9	21.7	17.7	33.1
0.75	43.4	32.5	26.6	49.6
1	57.9	43.4	35.5	66.2
1.25	72.3	54.2	44.3	82.7
1.5	86.9	65.1	53.3	99.3
2	115.9	86.8	71.0	132.4
2.5	144.8	108.5	88.8	165.5
3	173.8	130.2	106.6	198.6

Opening angle 60°

Fire width (m)	A	B	C	D
0.3	26.3	23.4	21.8	27.6
0.5	43.9	39.1	36.4	46.0
0.75	65.9	58.7	54.7	69.1
1	87.9	78.2	73.0	92.1
1.25	109.9	97.9	91.3	115.2
1.5	131.9	117.4	109.5	138.2
2	175.9	156.6	146.1	184.3
2.5	219.9	195.8	182.6	230.4
3	263.9	235.0	219.2	276.5

Opening angle 45°

Fire width (m)	A	B	C	D
0.3	35.0	32.5	31.6	36.2
0.5	58.3	54.1	52.7	60.3
0.75	87.6	81.3	79.2	90.5
1	116.8	108.4	105.6	120.7
1.25	146.1	135.6	132.0	150.9
1.5	175.3	162.7	158.5	181.1
2	233.7	216.9	211.3	241.4
2.5	292.2	271.2	264.1	301.8
3	350.7	325.4	317.0	362.2

Opening angle 33°

Fire width (m)	A	B	C	D
0.3	47.4	46.1	45.4	48.4
0.5	79.0	77.0	75.7	80.7
0.75	118.5	115.4	113.5	121.0
1	158.1	154.0	151.4	161.4
1.25	197.5	192.5	189.2	201.7
1.5	237.1	231.0	227.1	242.1
2	316.2	308.1	302.8	322.8
2.5	395.2	385.1	378.5	403.5
3	474.3	462.1	454.2	484.2

12.2.2**Smoke detection****Opening angle 100°**

Fire width (m)	A	B	C	D
0.3	10.9	7.4	5.8	12.9
0.5	18.2	12.4	9.7	21.5
0.75	27.4	18.6	14.5	32.3
1	36.6	24.9	19.4	43.1
1.25	45.7	31.0	24.2	53.8
1.5	54.9	37.3	29.1	64.6
2	73.2	49.8	38.9	86.2
2.5	91.5	62.2	48.6	107.7
3	109.9	74.7	58.3	129.3

Opening angle 90°

Fire width (m)	A	B	C	D
0.3	12.1	9.1	7.4	13.9
0.5	20.2	15.1	12.4	23.1
0.75	30.3	22.7	18.6	34.7
1	40.5	30.3	24.8	46.3
1.25	50.6	37.9	31.0	57.9
1.5	60.8	45.5	37.3	69.5
2	81.1	60.8	49.7	92.7
2.5	101.3	75.9	62.1	115.8
3	121.6	91.1	74.6	139.0

Opening angle 60°

Fire width (m)	A	B	C	D
0.3	18.4	16.4	15.3	19.3
0.5	30.7	27.3	25.5	32.2
0.75	46.1	41.0	38.2	48.3
1	61.5	54.8	51.1	64.5
1.25	76.9	68.5	63.9	80.6
1.5	92.2	82.1	76.6	96.7
2	123.1	109.6	102.2	129.0
2.5	153.9	137.1	127.8	161.3
3	184.6	164.4	153.4	193.5

Opening angle 45°

Fire width (m)	A	B	C	D
0.3	24.4	22.7	22.1	25.3
0.5	40.8	37.9	36.9	42.2
0.75	61.2	56.8	55.4	63.3
1	81.8	75.9	73.9	84.5
1.25	102.2	94.8	92.4	105.6
1.5	122.6	113.8	110.9	126.7
2	163.6	151.8	147.9	169.0
2.5	204.6	189.8	184.9	211.3
3	245.4	227.8	221.9	253.5

Opening angle 33°

Fire width (m)	A	B	C	D
0.3	33.1	32.2	31.7	33.8
0.5	55.2	53.8	52.9	56.4
0.75	82.9	80.8	79.4	84.7
1	110.6	107.7	46.2	112.9
1.25	138.3	134.7	57.8	141.2
1.5	165.9	161.6	158.9	169.4
2	221.3	215.6	211.9	225.9
2.5	276.6	269.5	264.9	282.4
3	332.0	323.4	317.9	338.9

12.3**LVF-5005N-S1250****12.3.1****Flame detection****Opening angle 33°**

Fire width (m)	A	B	C	D
0.3	47.6	45.7	44.9	48.5
0.5	79.5	76.3	74.9	80.9
0.75	119.2	114.5	112.3	121.3
1	159.0	152.7	149.9	161.8
1.25	198.8	190.9	187.4	202.3
1.5	238.5	229.1	224.8	242.7
2	318.0	305.4	299.8	323.6

2.5	397.7	381.9	374.9	404.6
3	477.2	458.3	449.8	485.5

Opening angle 26°

Fire width (m)	A	B	C	D
0.3	60.5	59.0	58.4	61.2
0.5	100.8	98.3	97.3	102.0
0.75	151.2	147.5	146.0	153.0
1	201.6	196.6	194.7	204.0
1.25	252.0	245.8	243.4	255.0
1.5	302.5	295.0	292.1	306.0
2	403.3	393.3	389.4	408.0
2.5	504.1	491.6	486.8	510.0
3	605.0	590.0	584.2	612.0

Opening angle 20°

Fire width (m)	A	B	C	D
0.3	78.5	77.4	76.9	79.1
0.5	130.8	129.1	128.1	131.8
0.75	196.4	193.7	192.3	197.8
1	261.8	258.3	256.4	263.7
1.25	327.4	323.0	320.6	329.7
1.5	392.8	387.5	384.6	395.6
2	523.8	516.8	512.9	527.5
2.5	654.8	646.0	641.2	659.4
3	785.8	775.2	769.4	791.3

Opening angle 14°

Fire width (m)	A	B	C	D
0.3	112.2	111.5	111.0	112.6
0.5	186.9	185.9	184.9	187.6
0.75	280.5	278.9	277.5	281.5
1	373.9	371.9	370.0	375.3
1.25	467.5	464.9	462.5	469.2
1.5	561.0	557.9	555.0	563.0
2	748.0	743.9	740.1	750.7

2.5	935.0	929.9	925.1	938.4
3	1122.1	1115.9	1110.2	1126.1

Opening angle 8.5°

Fire width (m)	A	B	C	D
0.3	184.9	184.4	184.1	185.1
0.5	308.1	307.4	306.9	308.5
0.75	462.2	461.1	460.4	462.8
1	616.2	614.8	613.8	617.0
1.25	770.3	768.5	767.3	771.3
1.5	924.4	922.3	920.8	925.6
2	1232.5	1229.7	1227.8	1234.1
2.5	1540.7	1537.2	1534.8	1542.7
3	1848.8	1844.6	1841.7	1851.2

12.3.2**Smoke detection****Opening angle 33°**

Fire width (m)	A	B	C	D
0.3	33.3	32.0	31.4	33.9
0.5	55.6	53.4	52.4	56.6
0.75	83.4	80.1	78.6	84.9
1	111.2	106.8	104.8	113.2
1.25	139.1	133.6	131.2	141.6
1.5	167.0	160.3	157.4	169.9
2	222.6	213.8	209.8	226.5
2.5	278.3	267.3	262.4	283.2
3	334.0	320.7	314.8	339.8

Opening angle 26°

Fire width (m)	A	B	C	D
0.3	42.3	41.2	40.8	42.8
0.5	70.5	68.8	68.1	71.4
0.75	105.8	103.2	102.2	107.1
1	141.1	137.6	136.3	142.8
1.25	176.4	172.0	170.3	178.5
1.5	211.7	206.5	204.4	214.2

2	282.3	275.3	272.6	285.6
2.5	352.9	344.1	340.7	357.0
3	423.5	413.0	408.9	428.4

Opening angle 20°

Fire width (m)	A	B	C	D
0.3	54.9	54.1	53.7	55.3
0.5	91.6	90.4	89.7	92.3
0.75	137.4	135.5	134.5	138.4
1	183.3	180.8	179.5	184.6
1.25	229.2	226.1	224.4	230.8
1.5	274.9	271.2	269.2	276.9
2	366.6	361.7	359.0	369.2
2.5	458.4	452.2	448.8	461.6
3	550.0	542.6	538.6	553.9

Opening angle 14°

Fire width (m)	A	B	C	D
0.3	78.5	78.0	77.6	78.8
0.5	130.8	130.1	129.4	131.3
0.75	196.3	195.2	194.2	197.0
1	261.7	260.3	258.9	262.7
1.25	327.2	325.4	323.7	328.4
1.5	392.7	390.5	388.5	394.1
2	523.6	520.7	518.0	525.5
2.5	654.5	650.9	647.6	656.9
3	785.4	781.0	777.0	788.2

Opening angle 8.5°

Fire width (m)	A	B	C	D
0.3	129.3	129.0	128.8	129.5
0.5	215.6	215.1	214.8	215.9
0.75	323.4	322.7	322.2	323.9
1	431.3	430.3	400.2	431.9
1.25	539.2	537.9	500.2	539.9
1.5	647.0	645.6	644.6	647.9

2	862.8	860.8	859.5	863.9
2.5	1078.5	1076.0	1074.4	1079.9
3	1294.1	1291.2	1289.2	1295.8

12.4 Commissioning report

Camera installation and configuration protocol

General	
Camera name (Configuration -> General -> Identification)	
Firmware version (Configuration -> Service -> System Overview)	
Date/Time setting (Configuration -> General -> Date/Time)	<input checked="" type="radio"/> Synchronized
Mounting height	
Field of view (Please add a screenshot)	
Screenshot location (e.g. network folder)	

Lens settings		
Lens opening angle		
ALC mode (Configuration -> Camera -> Installer Menu -> ALC mode)		
Focus Position (Configuration -> Camera -> Installer Menu -> Lens Wizard... -> Focus position)	Day mode	Night mode
Focus Indicator (Configuration -> Camera -> Installer Menu -> Lens Wizard... -> Focus indicator)	Day mode	Night mode
IR-corrected lens (Configuration -> Camera -> Installer Menu -> Lens Wizard... -> IR-corrected lens)	<input type="radio"/> On <input type="radio"/> Off	

Network settings	
IP address (Configuration -> Network -> Network Access)	

Connection	
IP connection tested	<input type="radio"/> Yes <input type="radio"/> No
Relay connected to	
Relay tested	<input type="radio"/> Yes <input type="radio"/> No
Relay Idle state	<input type="radio"/> CLOSED <input type="radio"/> OPEN

VFD Settings	
Flame detection (Configuration -> Alarm -> Fire detection)	<input type="radio"/> On <input type="radio"/> Off
Sensitivity	<input type="radio"/> low <input type="radio"/> mid <input type="radio"/> high
Verification time [s]	
Smoke detection (Configuration -> Alarm -> Fire detection)	<input type="radio"/> On <input type="radio"/> Off
Sensitivity	<input type="radio"/> low <input type="radio"/> mid <input type="radio"/> high
Verification time [s]	
Masks (smoke, flame, smoke time region, flame time region) (Please add a screenshot)	<input type="radio"/> Yes <input type="radio"/> No

<p>Privacy Masks (Please add a screenshot)</p>	<p><input type="radio"/> Yes <input type="radio"/> No</p>

Further configuration (e.g. recording, DynDNS, VCA configuration, Alarm Inputs ...):



Smoke test results (smoke cartridges)

Day/Night	Color	Monochrome
Distance to smoke cartridge		
Illumination		
Smoke cartridge(s)		
Smoke detected	<input type="radio"/> Yes <input type="radio"/> No	<input type="radio"/> Yes <input type="radio"/> No
Field of view (Please add a screenshot)		

Smoke test results (test video)

Day/Night	Color	Monochrome
Distance to monitor		
Illumination		
Smoke detected	<input type="radio"/> Yes <input type="radio"/> No	<input type="radio"/> Yes <input type="radio"/> No
Field of view (Please add a screenshot)		

Flame test results (test video)

Day/Night	Color	Monochrome
Distance to monitor		
Illumination		
Flame detected	<input type="radio"/> Yes <input type="radio"/> No	<input type="radio"/> Yes <input type="radio"/> No
Field of view (Please add a screenshot)		

Smoke/flame test results (test video)

Day/Night	Color	Monochrome
Distance to monitor		
Illumination		
Smoke detected	<input type="radio"/> Yes <input type="radio"/> No	<input type="radio"/> Yes <input type="radio"/> No
Flame detected	<input type="radio"/> Yes <input type="radio"/> No	<input type="radio"/> Yes <input type="radio"/> No
Field of view (Please add a screenshot)		

Place:	Issuer:
Date:	Signature:



Bosch Sicherheitssysteme GmbH

Robert-Bosch-Ring 5

85630 Grasbrunn

Germany

www.boschsecurity.com

© Bosch Sicherheitssysteme GmbH, 2020