



0-Insights LoRaWAN

Set up help/Installation Guide

Support E-mail: contact@conexaotechsolutions.com

Contents

Setup.....	3
Pre-Requisites	3
Run Installer	4
Get Host ID for License creation	6
Copy License file	6
Check for Services.....	6
Restarting Services.....	7

Setup

The set-up file installs the OInights LoraWAN plugin services on the machine.

Pre-Requisites

Operating System:

- Microsoft® Windows® 8.1 Pro/Enterprise (64 bit) or higher
- Microsoft® Windows® Server 2016 (64 bit): Essentials, Standard or higher

Software:

- Microsoft® .NET 4.7.2 Framework

CPU:

- Intel® Core™ i3-6100 3.7 GHz or better

RAM


- 8 GB

Hard Disk


- 256GB SSD



Run Installer

- Run the set-up file to install the O-Insights LoraWan plugin service.

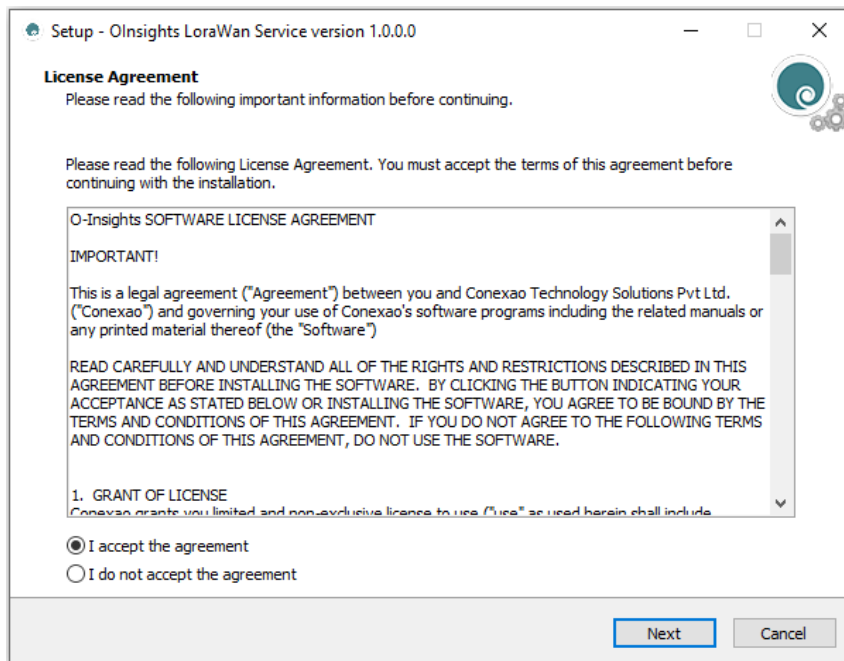

- Enter the Milestone credentials for configuring OInsights Service

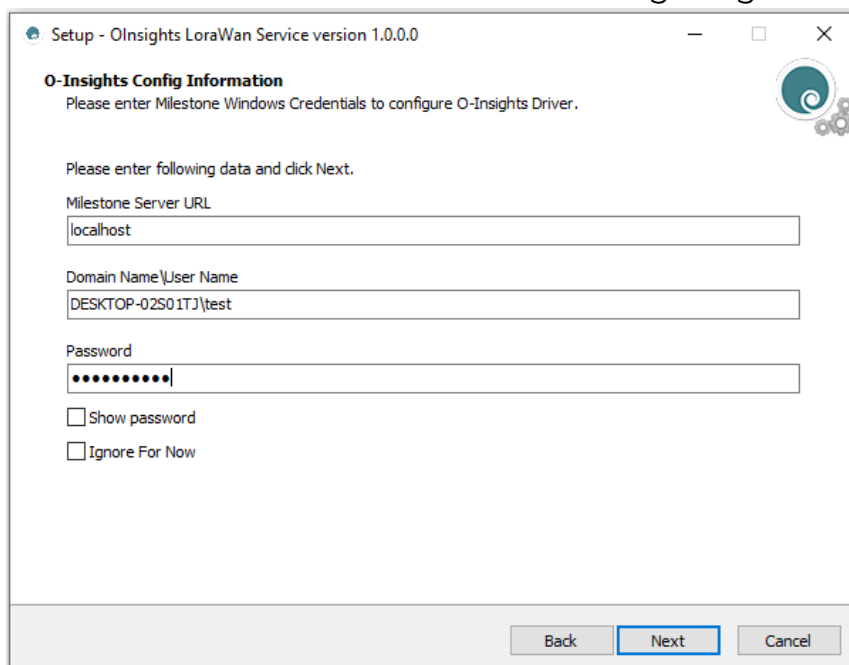


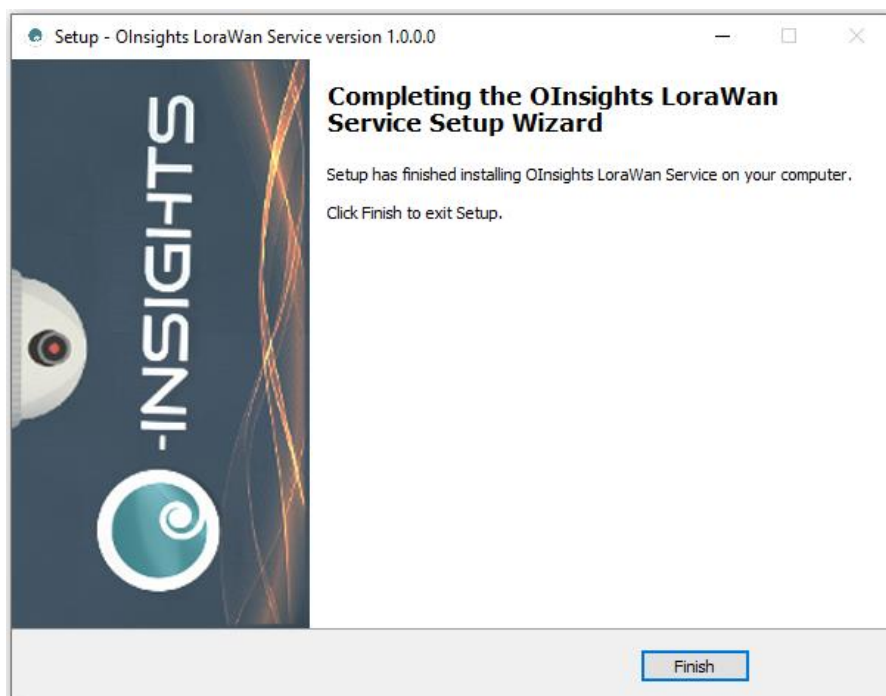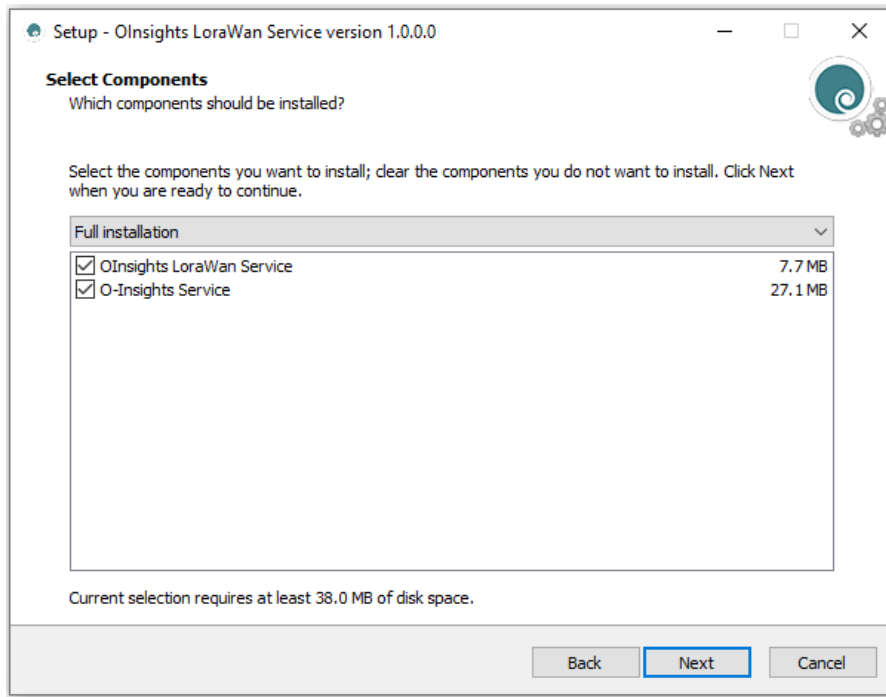

- The Typical Install path is C:\Program Files\OInights LoraWan Service

Get Host ID for License creation

- If you already have a valid license file for this PC then this step is not needed
- Run the HostID app to fetch the HOSTID of the PC.
 - The HostID app can be located at {InstallDirectory}\HostID.exe
- This HOSTID needs to be provided to generate the product license.

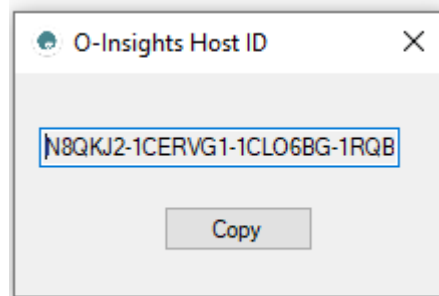

Copy License file

- Copy the License file to the 'License' folder inside the directory where the product is installed.

Check for Services

The Driver consists of the following windows services:

1. O-Insights
2. OInsights LorawanService

Ensure the account used for OInsights LoraWan Service is a valid Milestone Windows account.

O-Insights	O-Insights VMS Service	Running	Automatic	.\test
OInsights LoraWanService	Collects data from LoraWan Gateways	Running	Automatic	Local Syste...

Restarting Services

Make sure the services are running. Any change in LoraWan configuration will need the services to be restarted (Start->Search for 'Services' to open the Services app).